

1461-01/2820-01/1491-01/1491-01/8210-01/3110-01/3410-01/4892-01/4620-12/8810-01/8010-01/7410-13/7410-02/7410-04/8510-52/8510-48/8710-02/7830-03/
8510-05/8610-06/7632-16/7340-03/8310-01/8510-00/8320-01/8410-01/8210-01/8310-10/4810-01/7770-02/7770-10/8910-01/8930-01/8790-01/6810-15/6910-01/6810-

INDEX

CIRCUIT

ENGINE

1461-00 STARTING / CHARGING.....	3
2820-00 PREHEATING CIRCUIT.....	5
1491-00 ECU (ENGINE CONTROL UNIT - D20/D27DT EU-IV).....	6
1491-00 ECU (ENGINE CONTROL UNIT - D20/D27DT).....	9
1490-00 ECU (ENGINE CONTROL UNIT - GSL G32).....	12
1490-00 ECU (ENGINE CONTROL UNIT - GSL G23).....	15
8210-00 DIAGNOSIS CIRCUIT.....	18

CHASSIS

3110-00 TCU (6-A/T).....	19
3110-00 TCU (5-A/T).....	21
3110-00 TCU (4-A/T).....	23
3740-00 A/T SHIFT LOCK (4-A/T).....	24
3410-00 TCCU.....	25
4892-00 ABS/ESP	26
4620-00 S.S.P.S (SPEED SENSITIVE POWER STEERING).....	28

ELECTRIC

8810-00 AIR-BAG (CURTAIN AIR-BAG).....	29	7770-00 INTERIOR LAMP CIRCUIT.....	58
8010-00 CLUSTER.....	30	7770-00 AUTO DIMMING ROOM MIRROR CIRCUIT.....	59
7410-00 POWER SEAT - DRIVER (W/ MEMORY).....	32	8910-00 AUDIO / CLOCK CIRCUIT.....	60
7410-00 POWER SEAT - DRIVER (W/O MEMORY).....	34	8790-00 PARKING AID CIRCUIT.....	61
7410-00 POWER SEAT - PASSENGER.....	35	6810-00 PTC HEATER (POSITIVE TEMPERATURE COEFFICIENT)...	62
8510-00 ELECTRIC OUTSIDE MIRROR /FOLDING(W/O MEMORY).....	36	6810-00 FATC (FULL AUTO TEMP. CONTROL) CIRCUIT.....	63
8510-00 FRT SEAT WARMER.....	37	6810-00 AIR-CON (MANUAL) CIRCUIT.....	69
8610-00 RR SEAT WARMER.....	38		
8710-00 STICS.....	39		
7830-00 RR WIPER CIRCUIT.....	46		
8510-00 POWER WINDOW CIRCUIT.....	47		
8610-00 HORN.....	48		
7632-00 CIGAR LIGHTER / POWER OUTLET CIRCUIT.....	49		
7340-00 SUN ROOF CIRCUIT.....	50		
8310-00 HEAD LAMP / DRL (DAY TIME RUNNING LIGHT) UNIT CIRCUIT.....	51		
8510-00 HLLD (HEAD LAMP LEVEL G DEVICE) CIRCUIT.....	52		
8320-00 TAIL LAMP CIRCUIT.....	53		
8410-00 TURN SIGNAL / HAZARD LAMP CIRCUIT.....	54		
8210-00 TRAILER LAMP CIRCUIT.....	55		
8310-00 FOG LAMP CIRCUIT.....	56		
4810-00 STOP / BACK-UP LAMP CIRCUIT.....	57		

Memo

[illegible]

Memo


This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

SGN

1461-00

STARTING / CHARGING


1) 5-AT, M/T

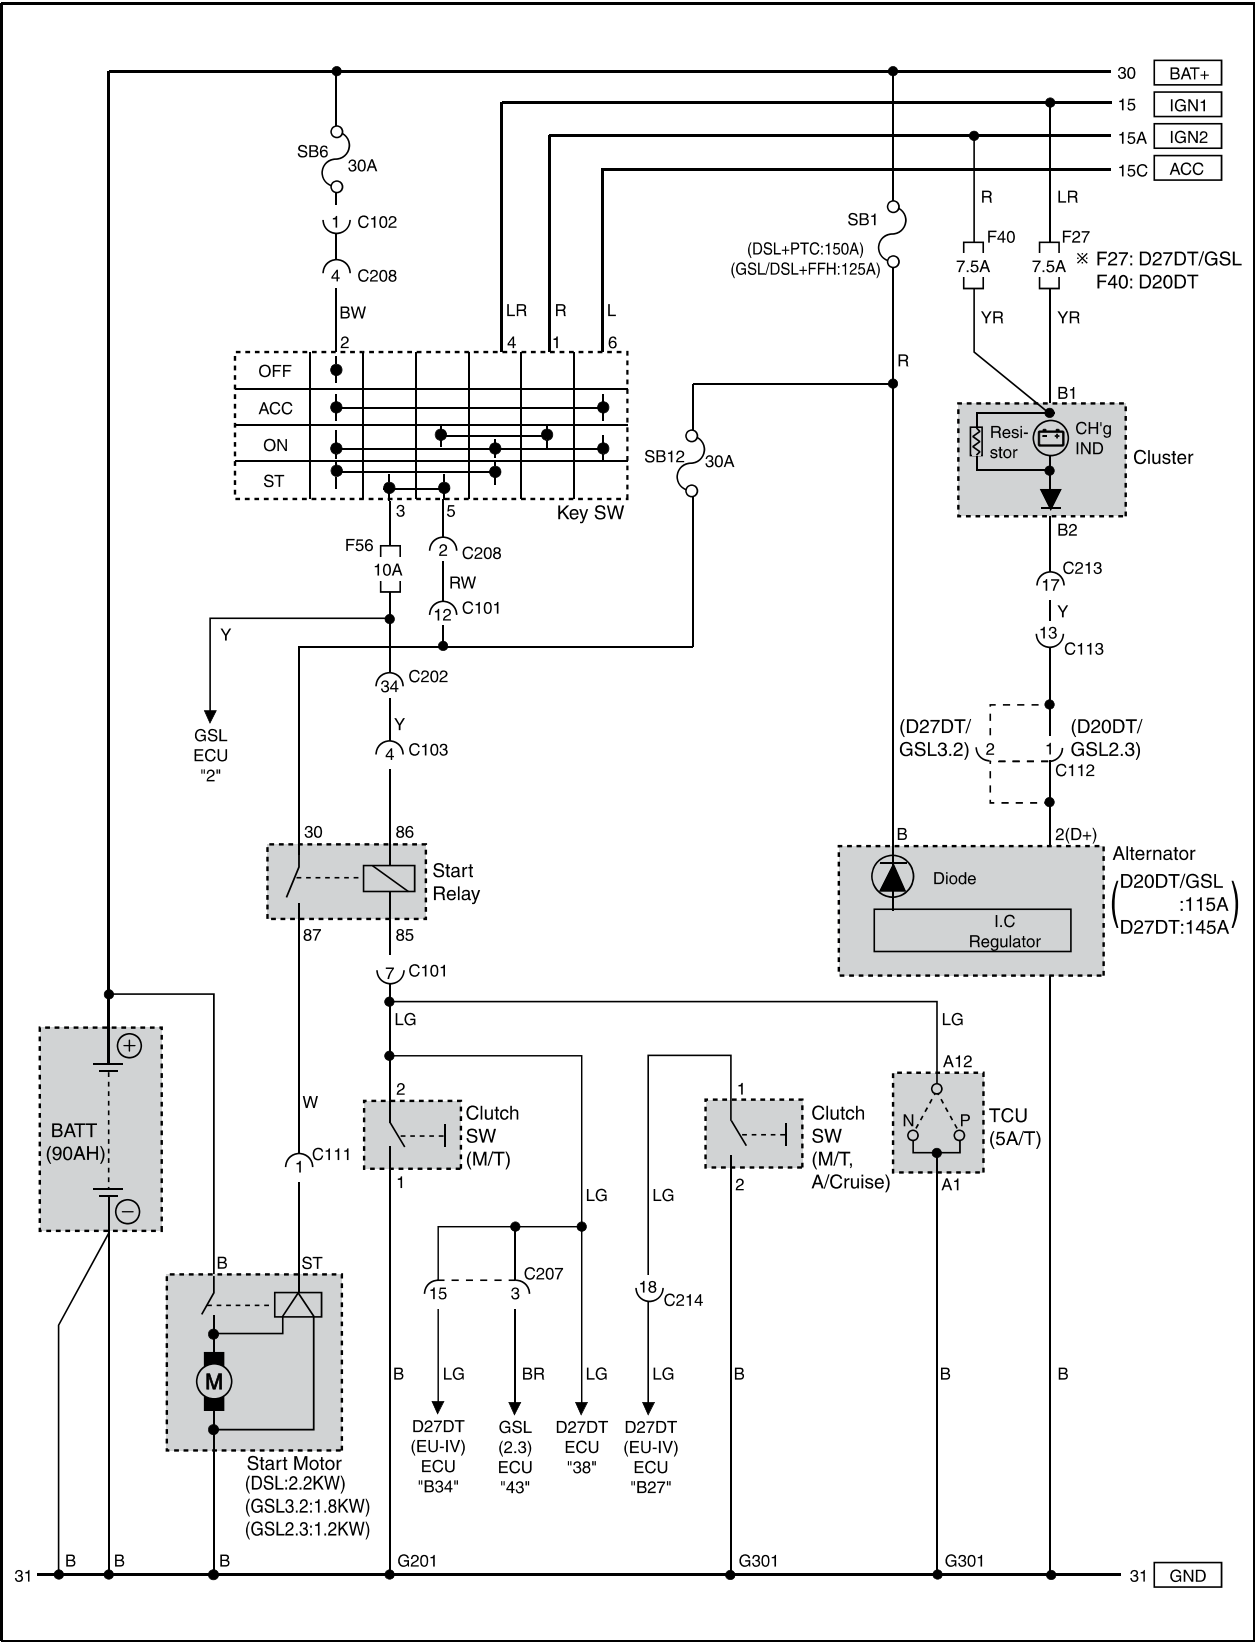

(1) CONNECTOR INFORMATION


Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C111 (1Pin, Gray)	W/H Floor - Starter Motor	Under the Preheating Time Relay	Solenoid
C112	(2Pin, Black)	W/H Eng - W/H Alternator	Behind RH Head Lamp
	(4Pin, Black)	W/H Eng - W/H Alternator	Behind RH Head Lamp
C113 (16Pin, Black)	W/H Eng - W/H Floor	Inside RH Fender PNL	
C202 (39Pin, Black)	W/H Eng - W/H Floor	Driver Cowl Side C/Holder	
C207 (26Pin, White)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C208 (4Pin, Colorless)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C214 (20Pin, Yellow)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G201	W/H Floor	Under the Driver Cowl Side PNL	Under C/Holder
G301	W/H Floor	Under the Driver Seat	

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

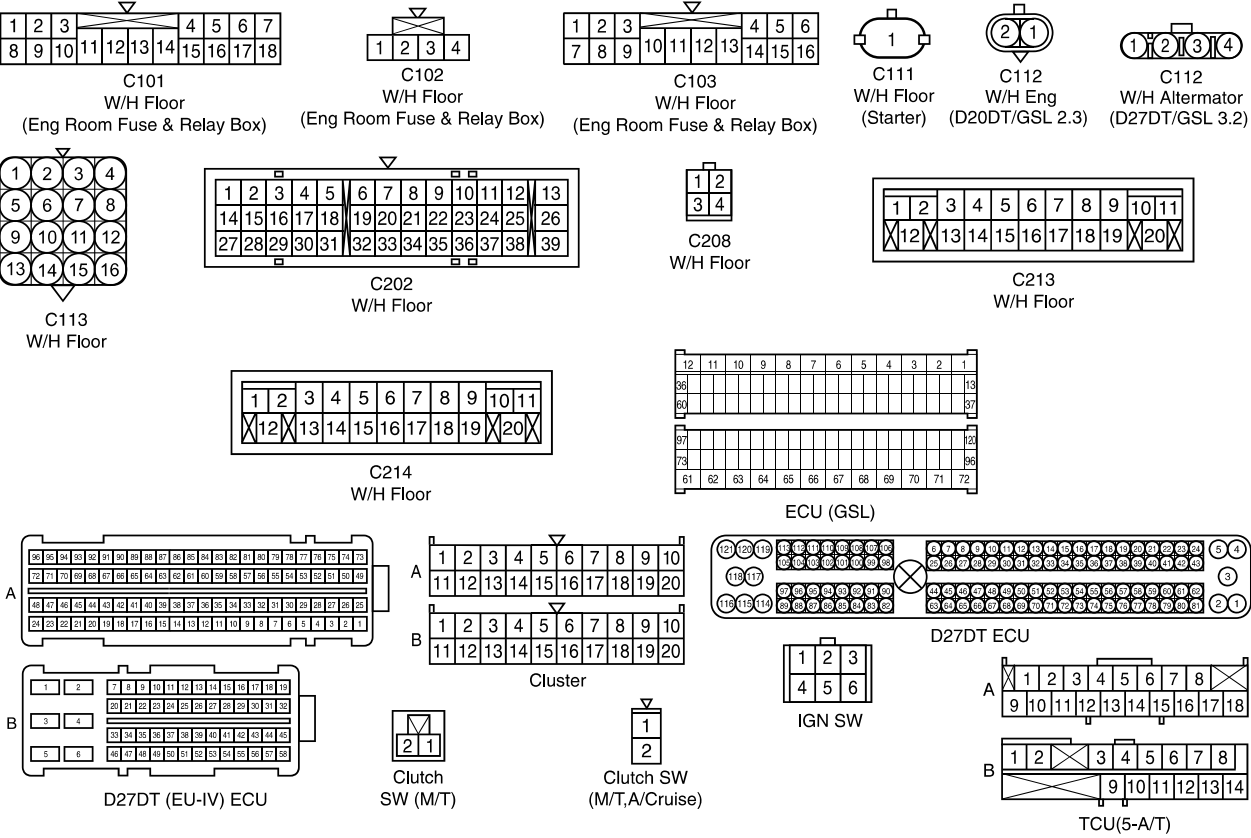

Modification basis	
Application basis	
Affected VIN	


2820-00 PREHEATING CIRCUIT

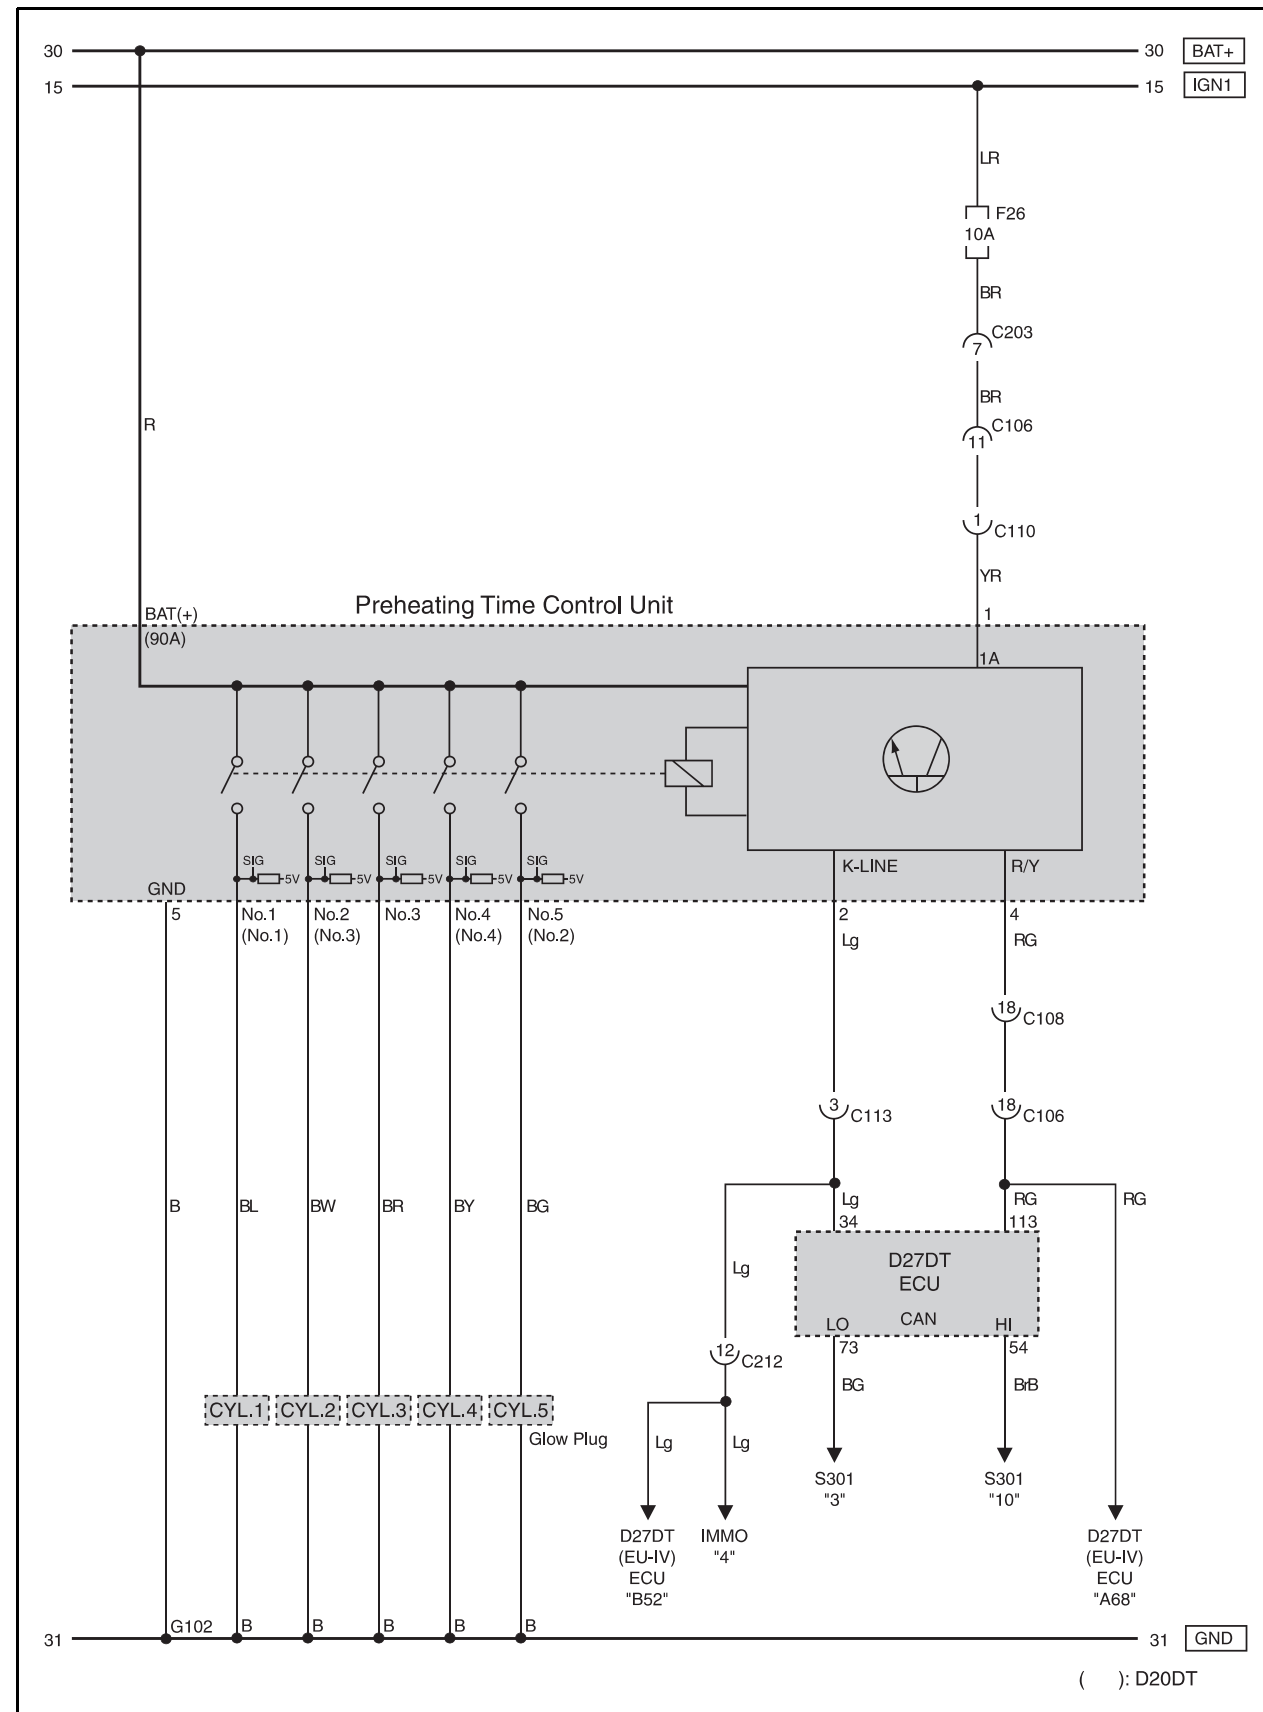

(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C110 (10Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C113 (16Pin, Black)	W/H Eng - W/H Floor	Inside RH Fender PNL	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G102	W/H Eng Room	Behind LH Head Lamp	
S301 (14Pin, Black)	W/H Main	Beside Driver Seat W/H Protector	CAN


(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

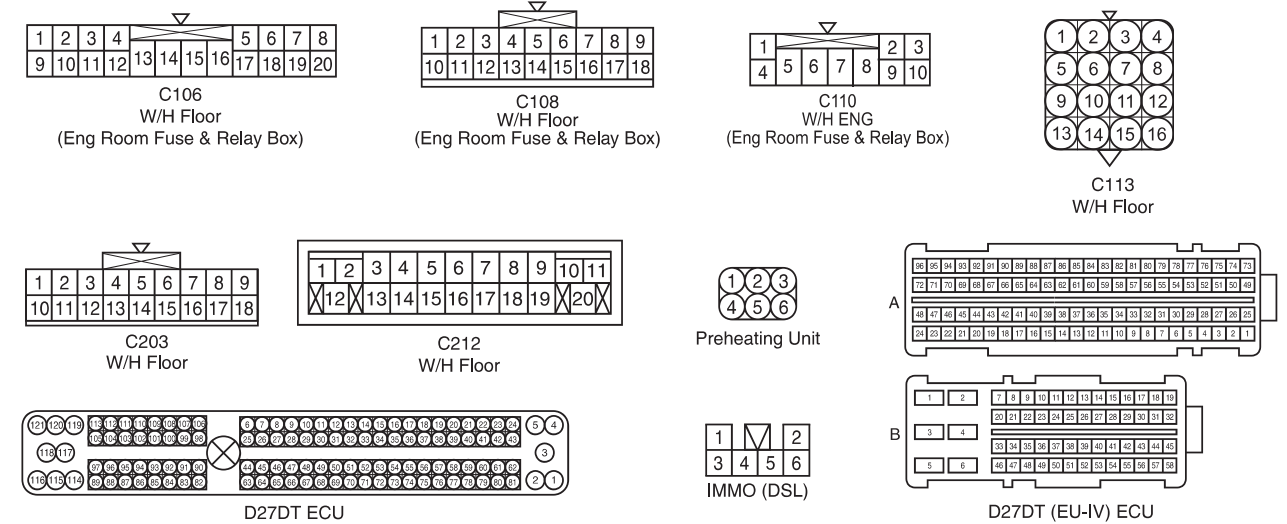

Modification basis	
Application basis	
Affected VIN	

1491-00 ECU (ENGINE CONTROL UNIT - D20/D27DT EU-IV)


1) ENG MAIN RELAY, INTAKE THROTTLE, A/CRUISE SW, VALVE (E-EGR, WASTE GATE, INLET METERING), SENSOR (HFM, PEDAL)

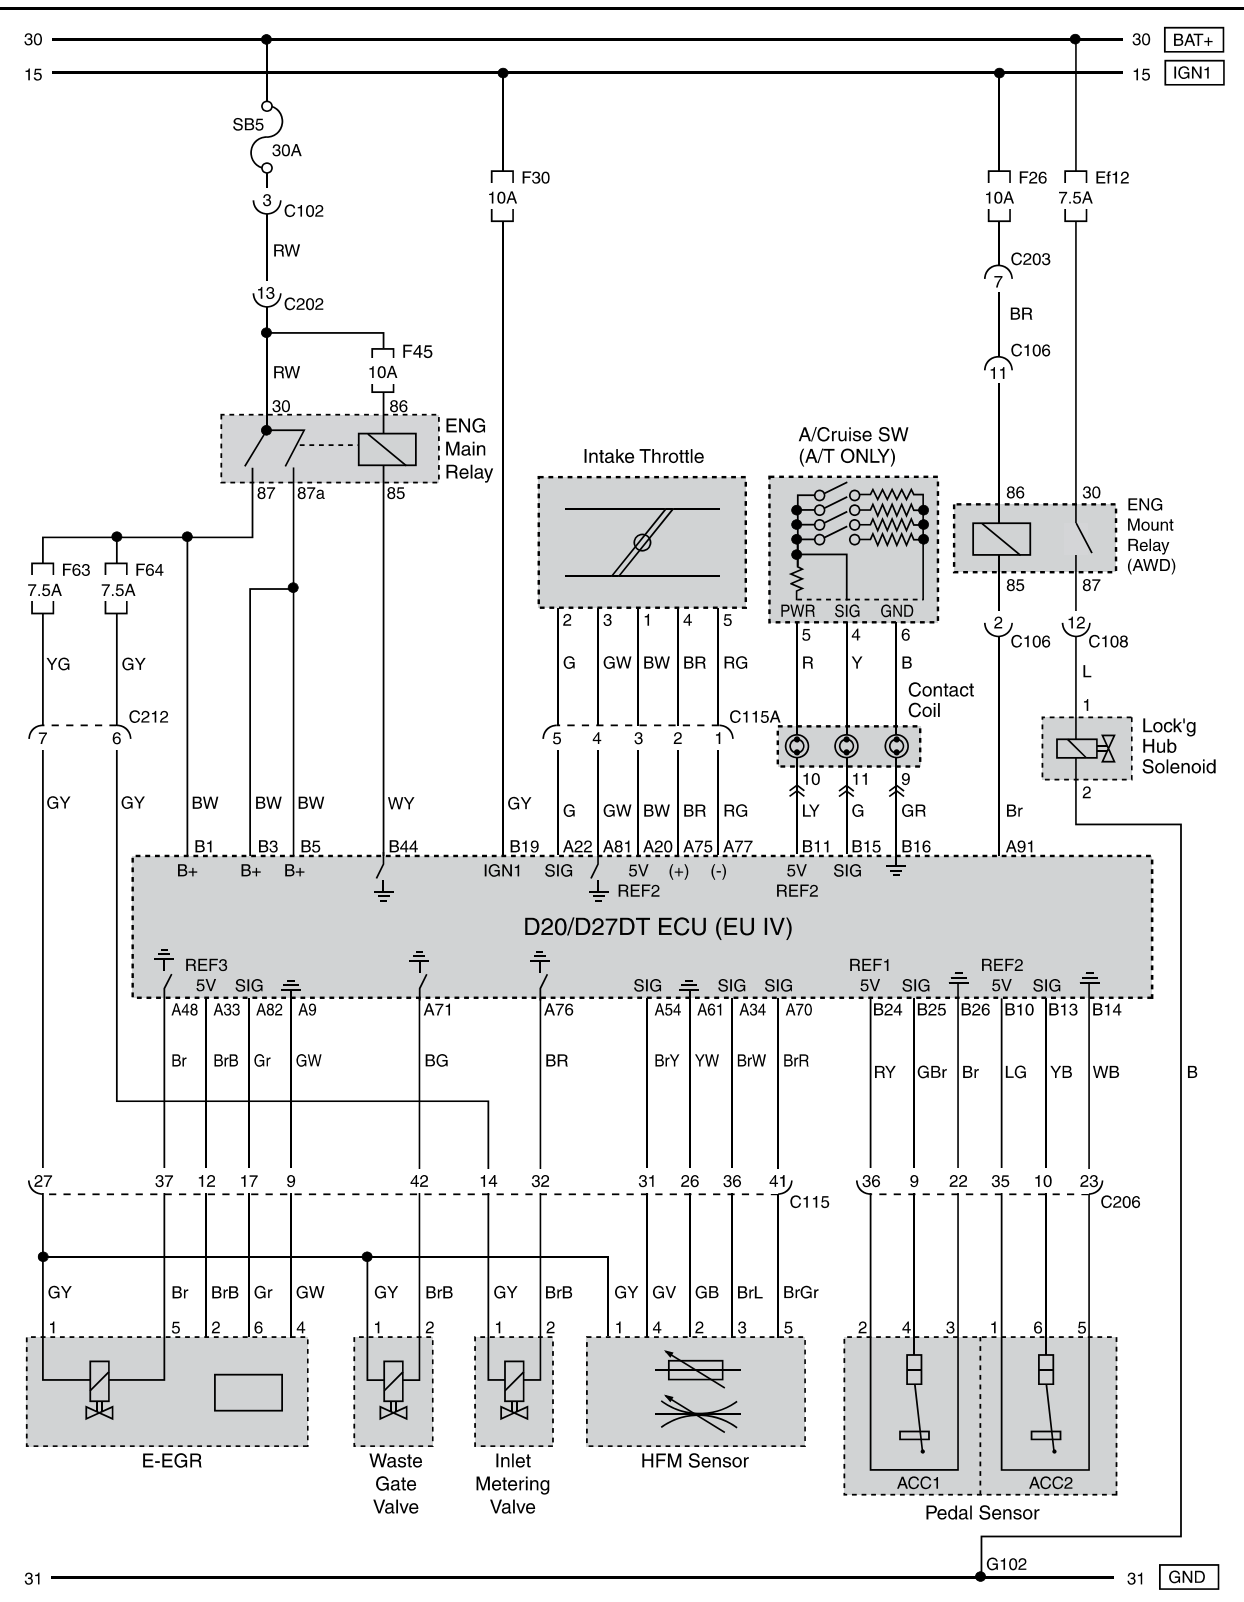

(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C115A (12Pin, White)	W/H Eng - W/H Floor	Beside ABS/ESP Unit	D20/D27DT(EU IV)
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C207 (26Pin, White)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G102	W/H Eng Room	Behind LH Head Lamp	


(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

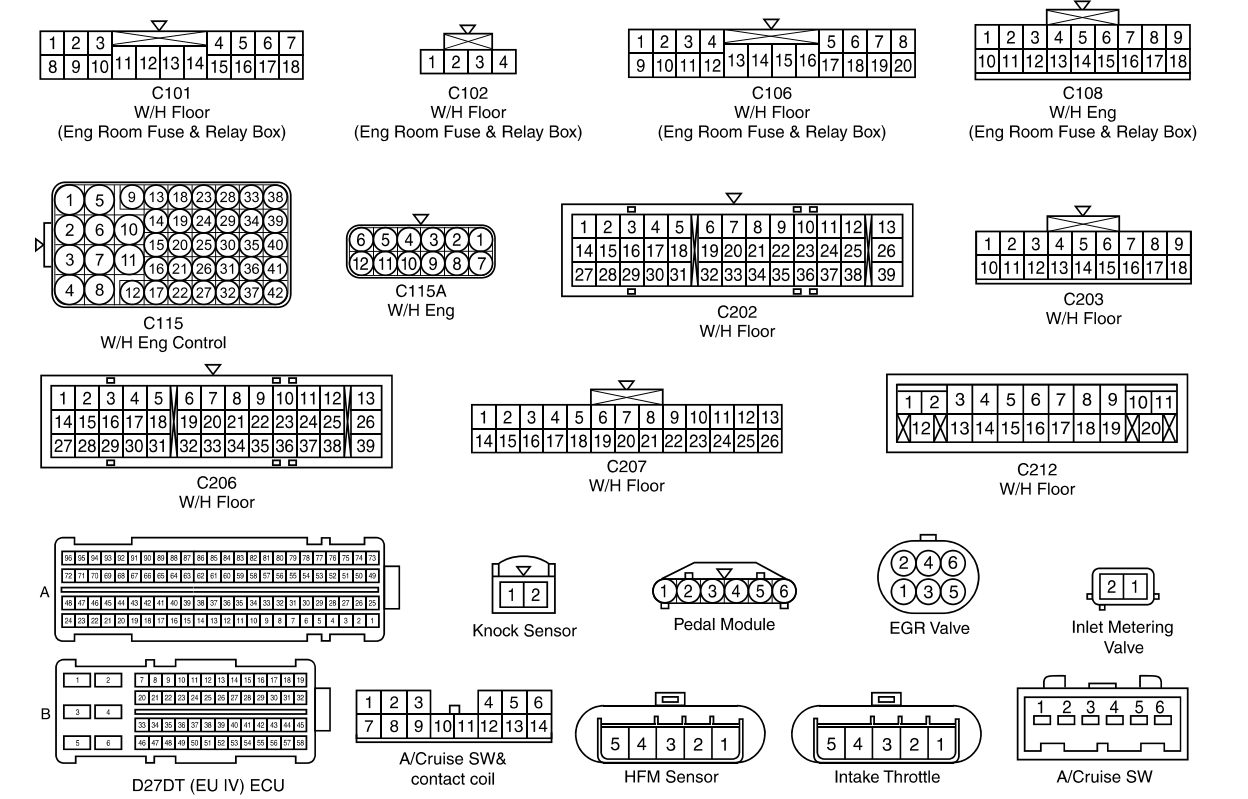

ENGINE	REFERENCE VOLTAGE	SENSOR
EURO IV	REF1	Cam Shaft Sensor, Fuel Pressure Sensor, Pedal Sensor1
	REF2	Pedal Sensor2, Cruise Control S/W, Intake Throttle, Booster Pressure Sensor
	REF3	Δ Sensor, E-EGR, A/Con Pressure Sensor

Modification basis	
Application basis	
Affected VIN	


2) SENSOR (FUEL PRESSURE, CAM SHAFT, BOOSTER PRESSURE, CRANK SHAFT, KNOCK, FUEL TEMP, FUEL FILTER WARNING), PTC RELAY

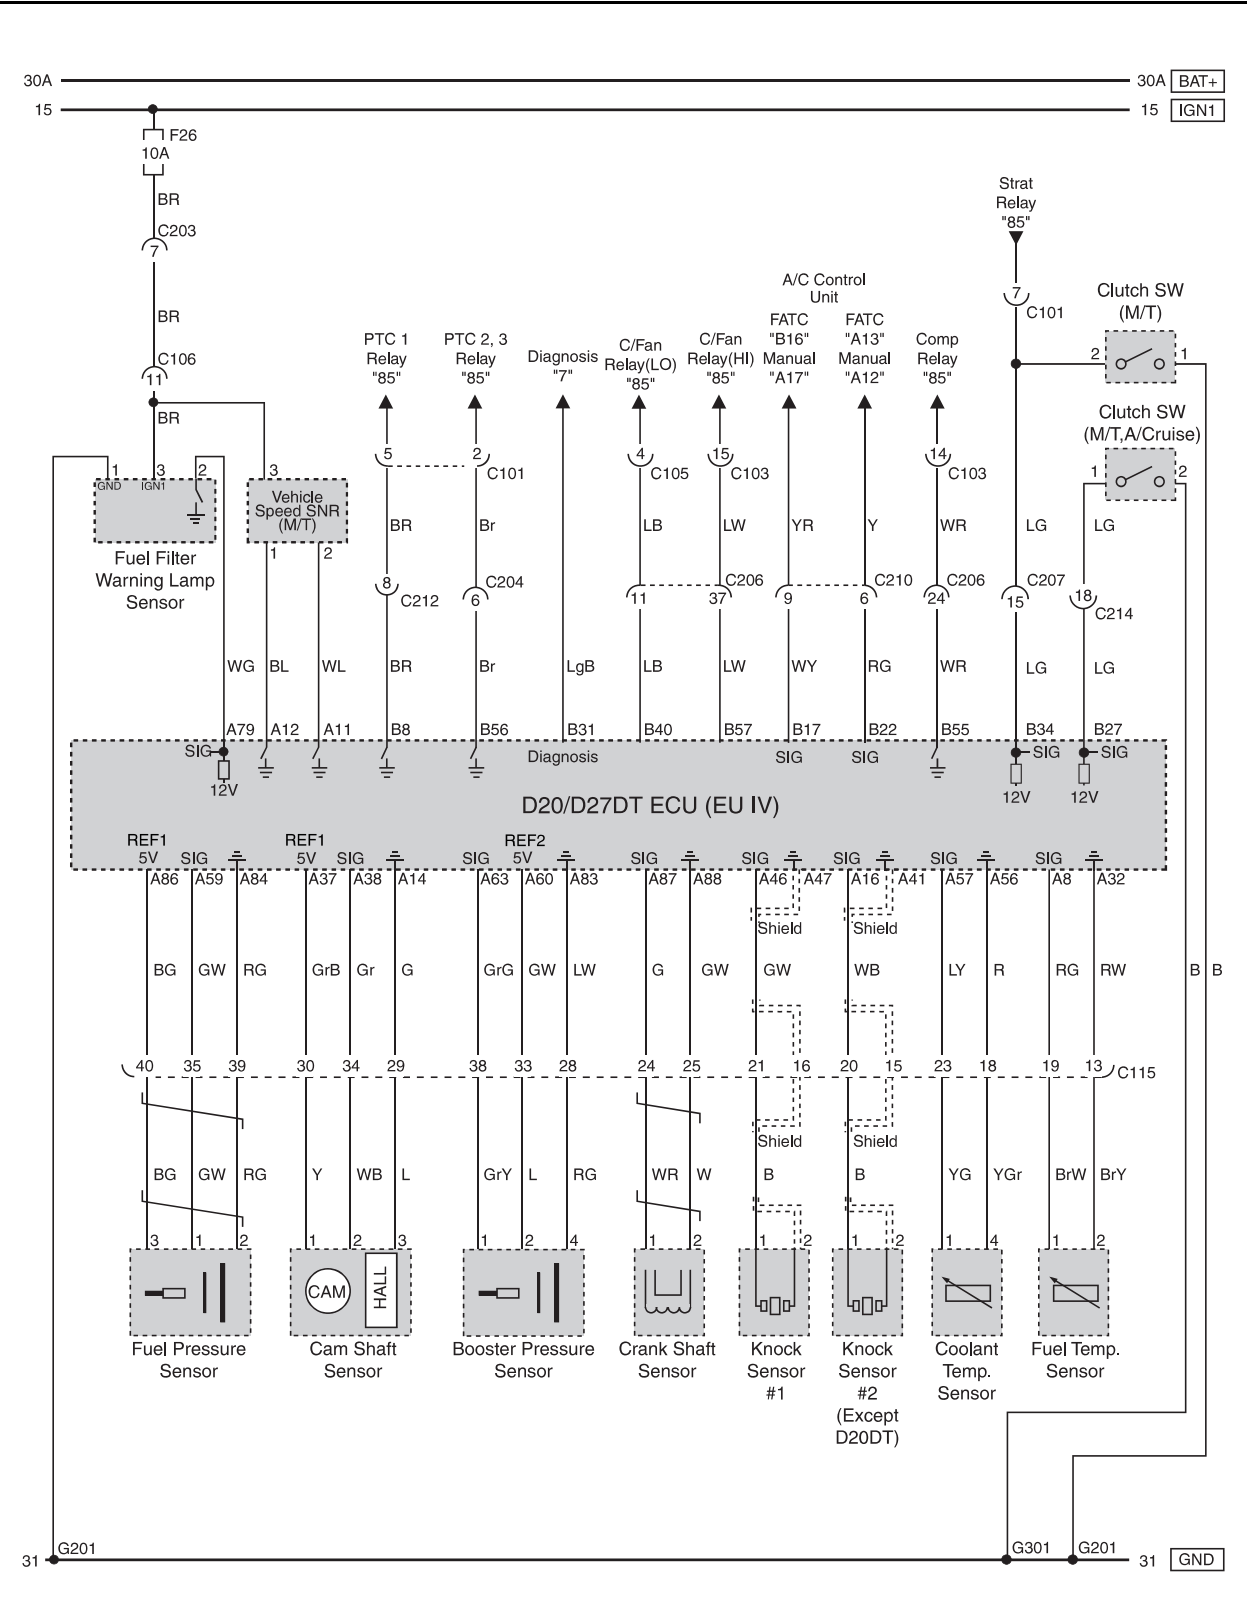

(1) CONNECTOR INFORMATION


Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C105 (10Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C204 (6Pin, Colorless)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C207 (26Pin, White)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C210 (16Pin, White)	W/H Main - W/H A/Con	Inside the Middle I/P (Right PTC)	
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C214(20Pin, Yellow)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G201	W/H Floor	Under the Driver Cowl Side PNL	Under C/Holder
G301	W/H Floor	Under the Driver Seat	

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

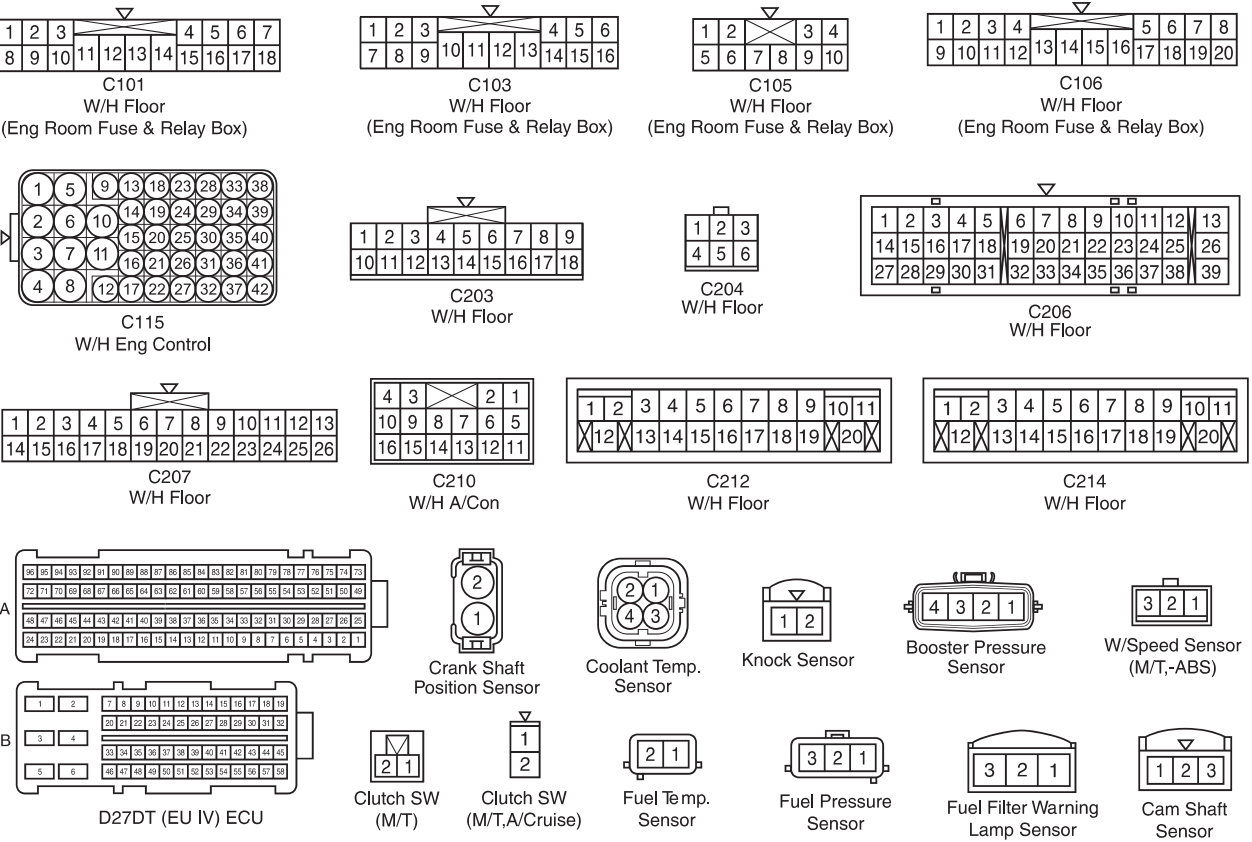

Modification basis	
Application basis	
Affected VIN	


3) INJECTOR, STOP LAMP, IMMOBILIZER, CLUSTER, PREHEATING UNIT, SENSOR (EXHAUST GAS TEMP), TRIPPLE PRESSURE SW

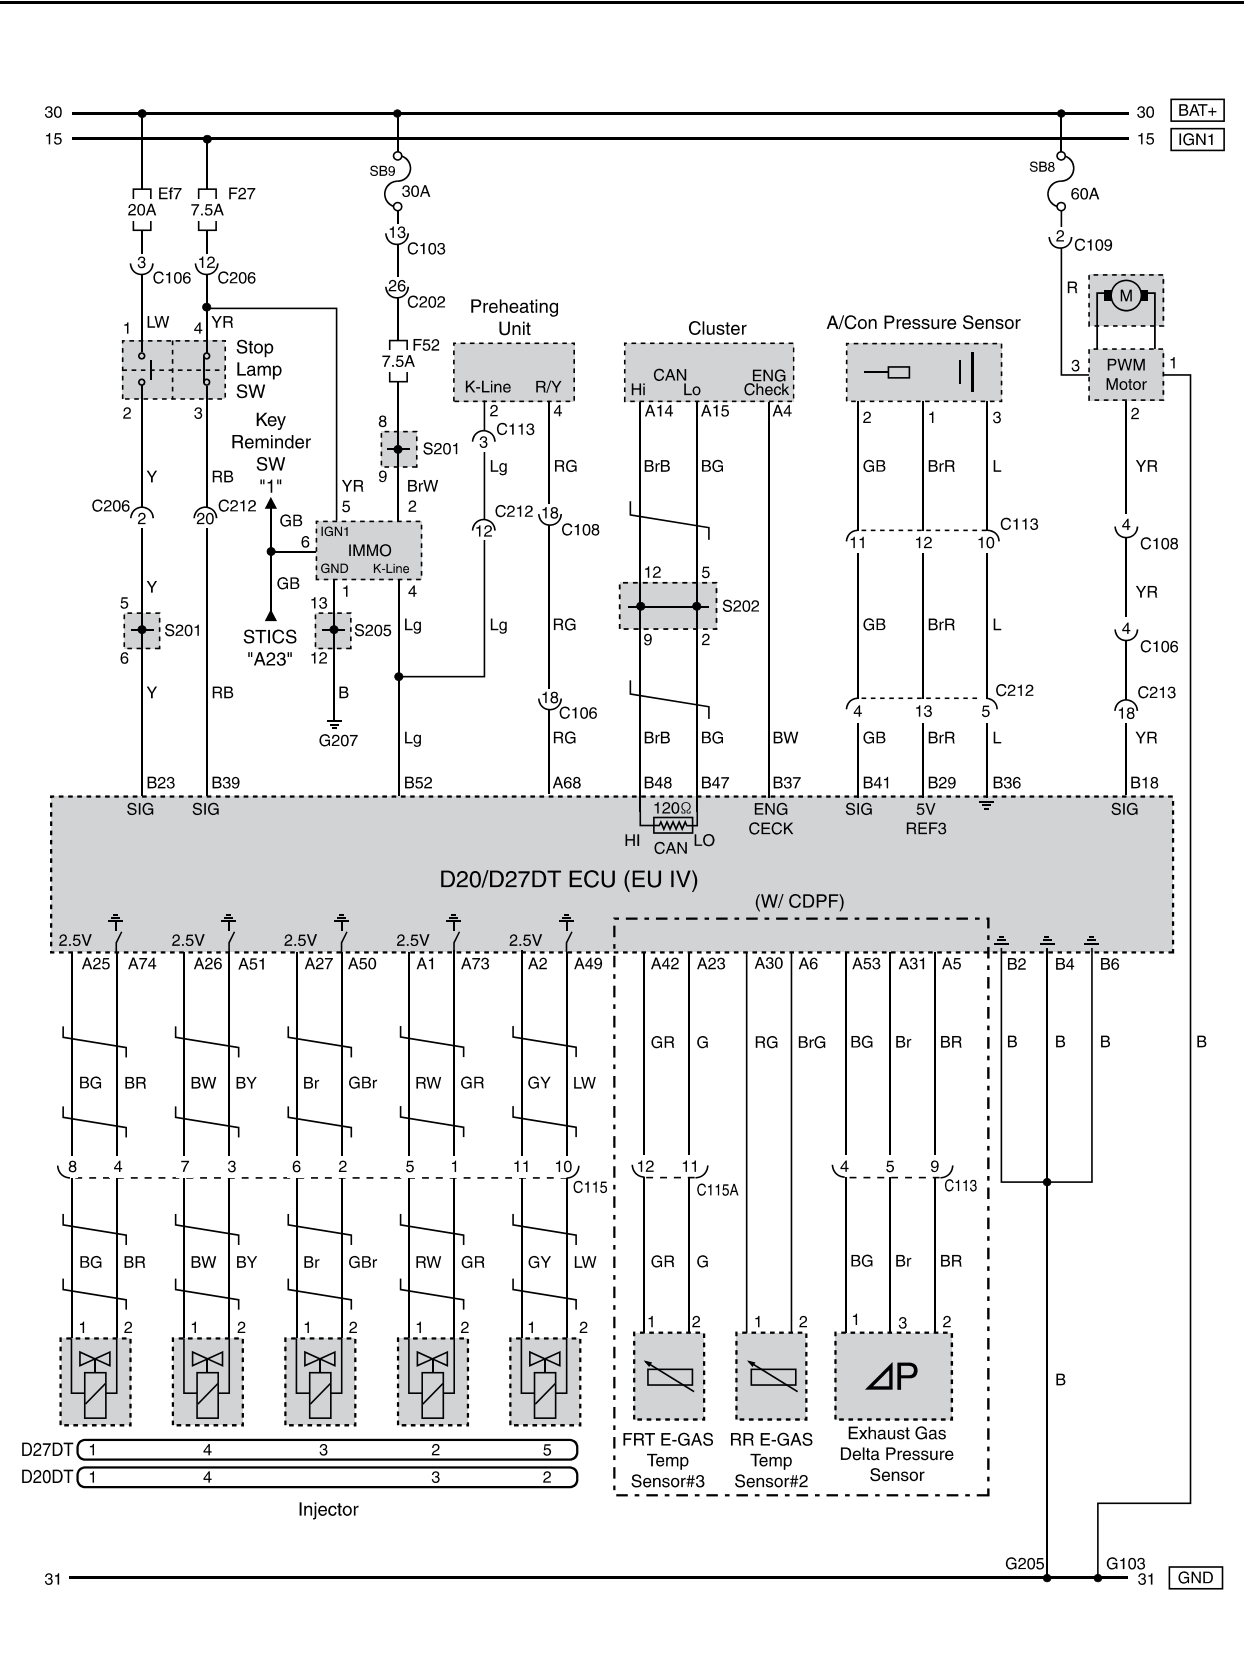

(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C109 (2Pin, Black)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C113 (16Pin, Black)	W/H Eng - W/H Floor	Inside RH Fender PNL	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C115A (12Pin, White)	W/H Eng - W/H Floor	Beside ABS/ESP Unit	D20/27DT(EU IV)
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G103	W/H Eng Room	LH FRT END PNL (LH Head Lamp Side)	GSL 2.3, DSL M/T
G205	W/H Main	RH Eng ECU	ECU
G207	W/H Main	Inner the Passenger Cowl Side PNL	
S201 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	
S202 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	GND
S205 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	GND

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

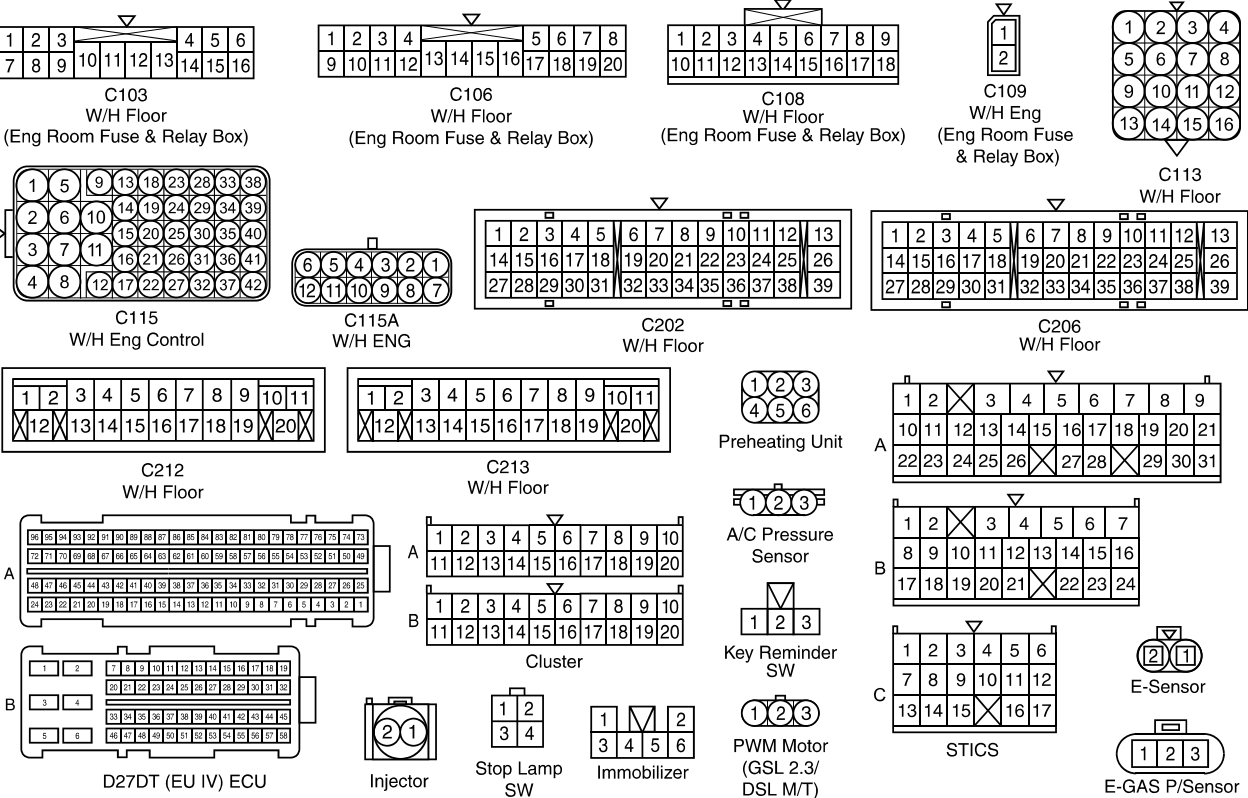


Modification basis	
Application basis	
Affected VIN	

1491-00

ECU (ENGINE CONTROL UNIT - D20/D27DT)


1) ENG MAIN RELAY, PEDAL SENSOR, HFM SENSOR, VALVE, CRUISE CONTROL SW, ENG MOUNT RELAY

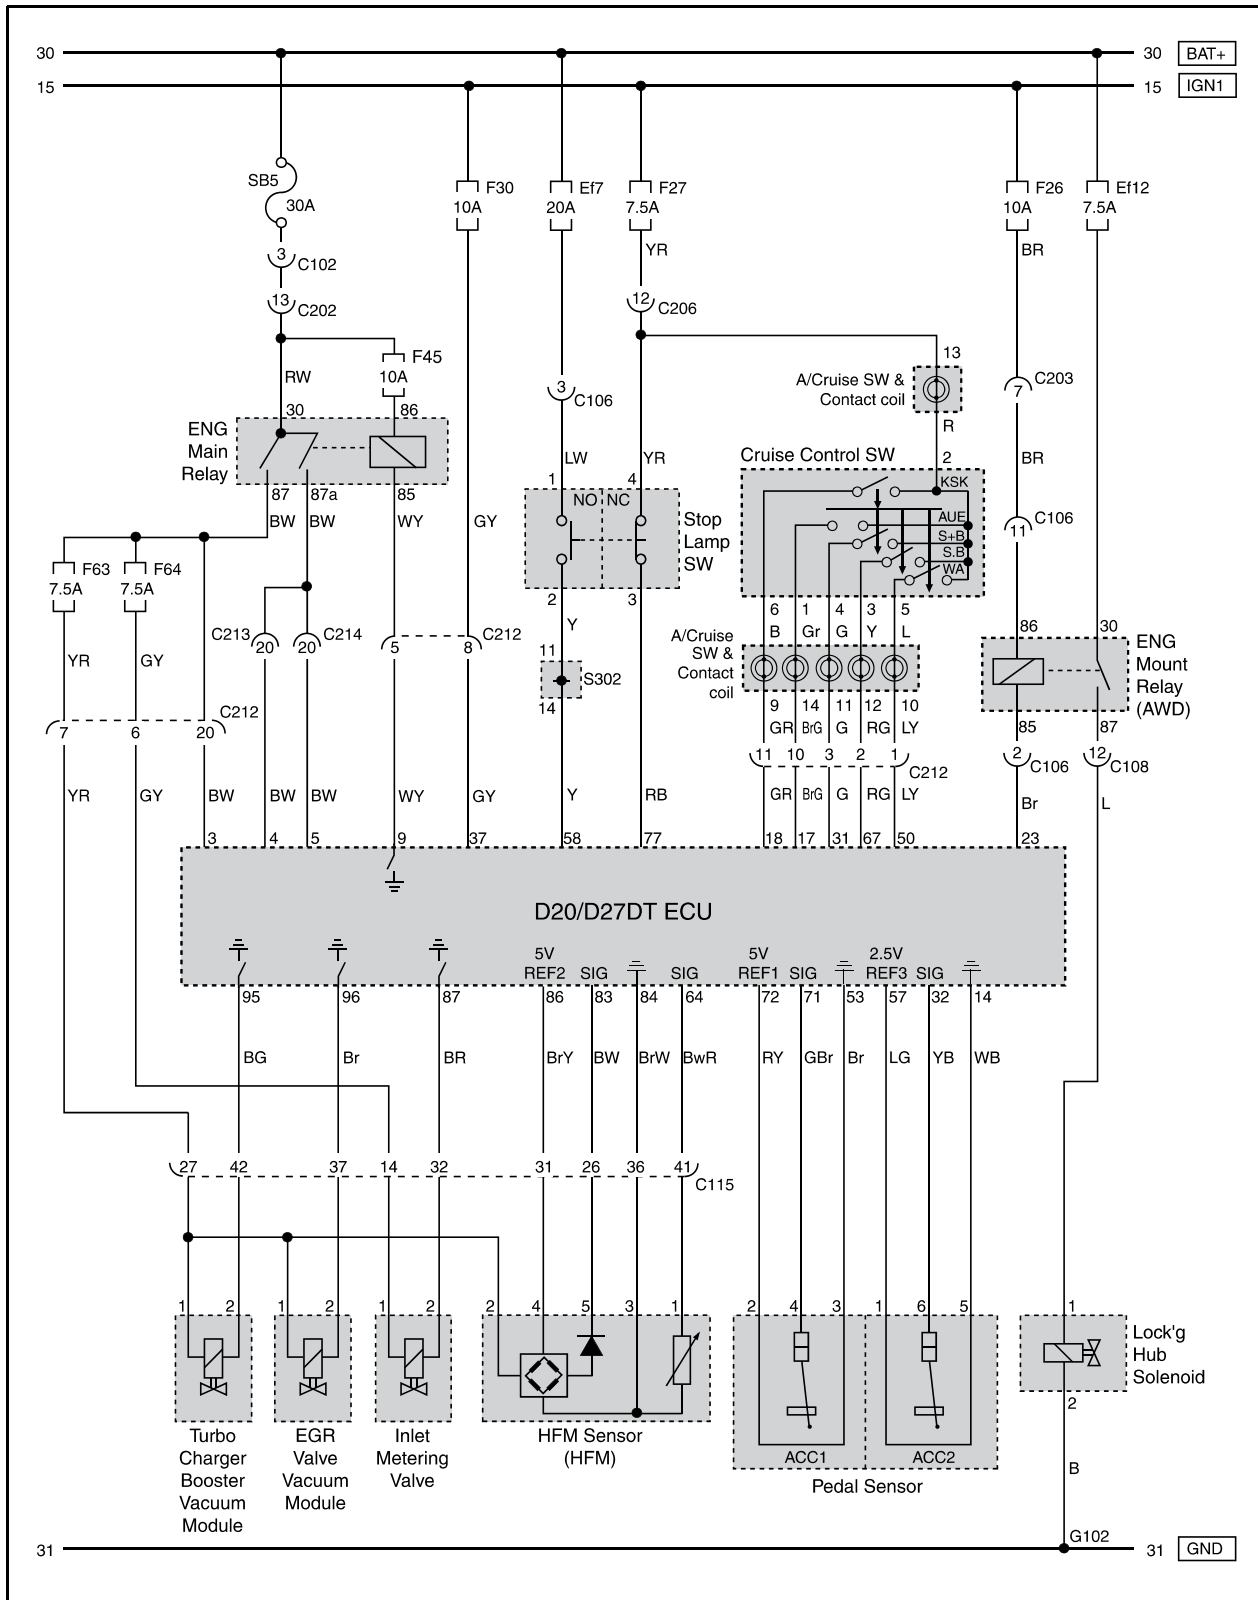

(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C214 (20Pin, Yellow)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G102	W/H Eng Room	Behind LH Head Lamp	
S302 (14Pin, Black)	W/H Main	Beside RR LH Seat W/H Protector	


(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

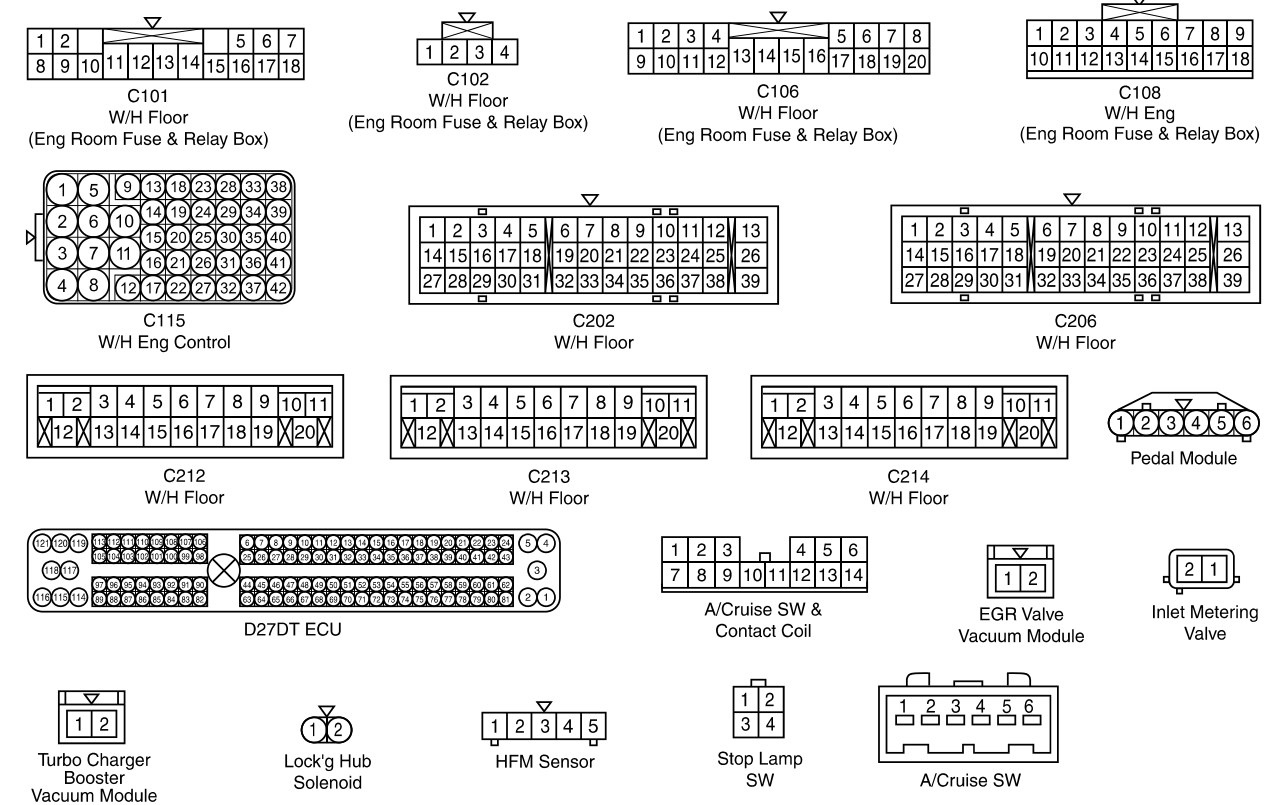

ENGINE	REFERENCE VOLTAGE	SENSOR
EURO III	REF1	Pedal Sensor1
	REF2	HFM Sensor, Cam Shaft Sensor, Fuel Pressure Sensor, Booster Pressure Sensor
	REF3	Pedal Sensor2

Modification basis	
Application basis	
Affected VIN	


2) FUEL FILTER WARNING LAMP, IMMOBILIZER, SENSOR (FUEL PRESSURE, CAM SHAFT, BOOSTER PRESSURE, CRANK SHAFT, KNOCK, COOLANT TEMP., FUEL TEMP.)

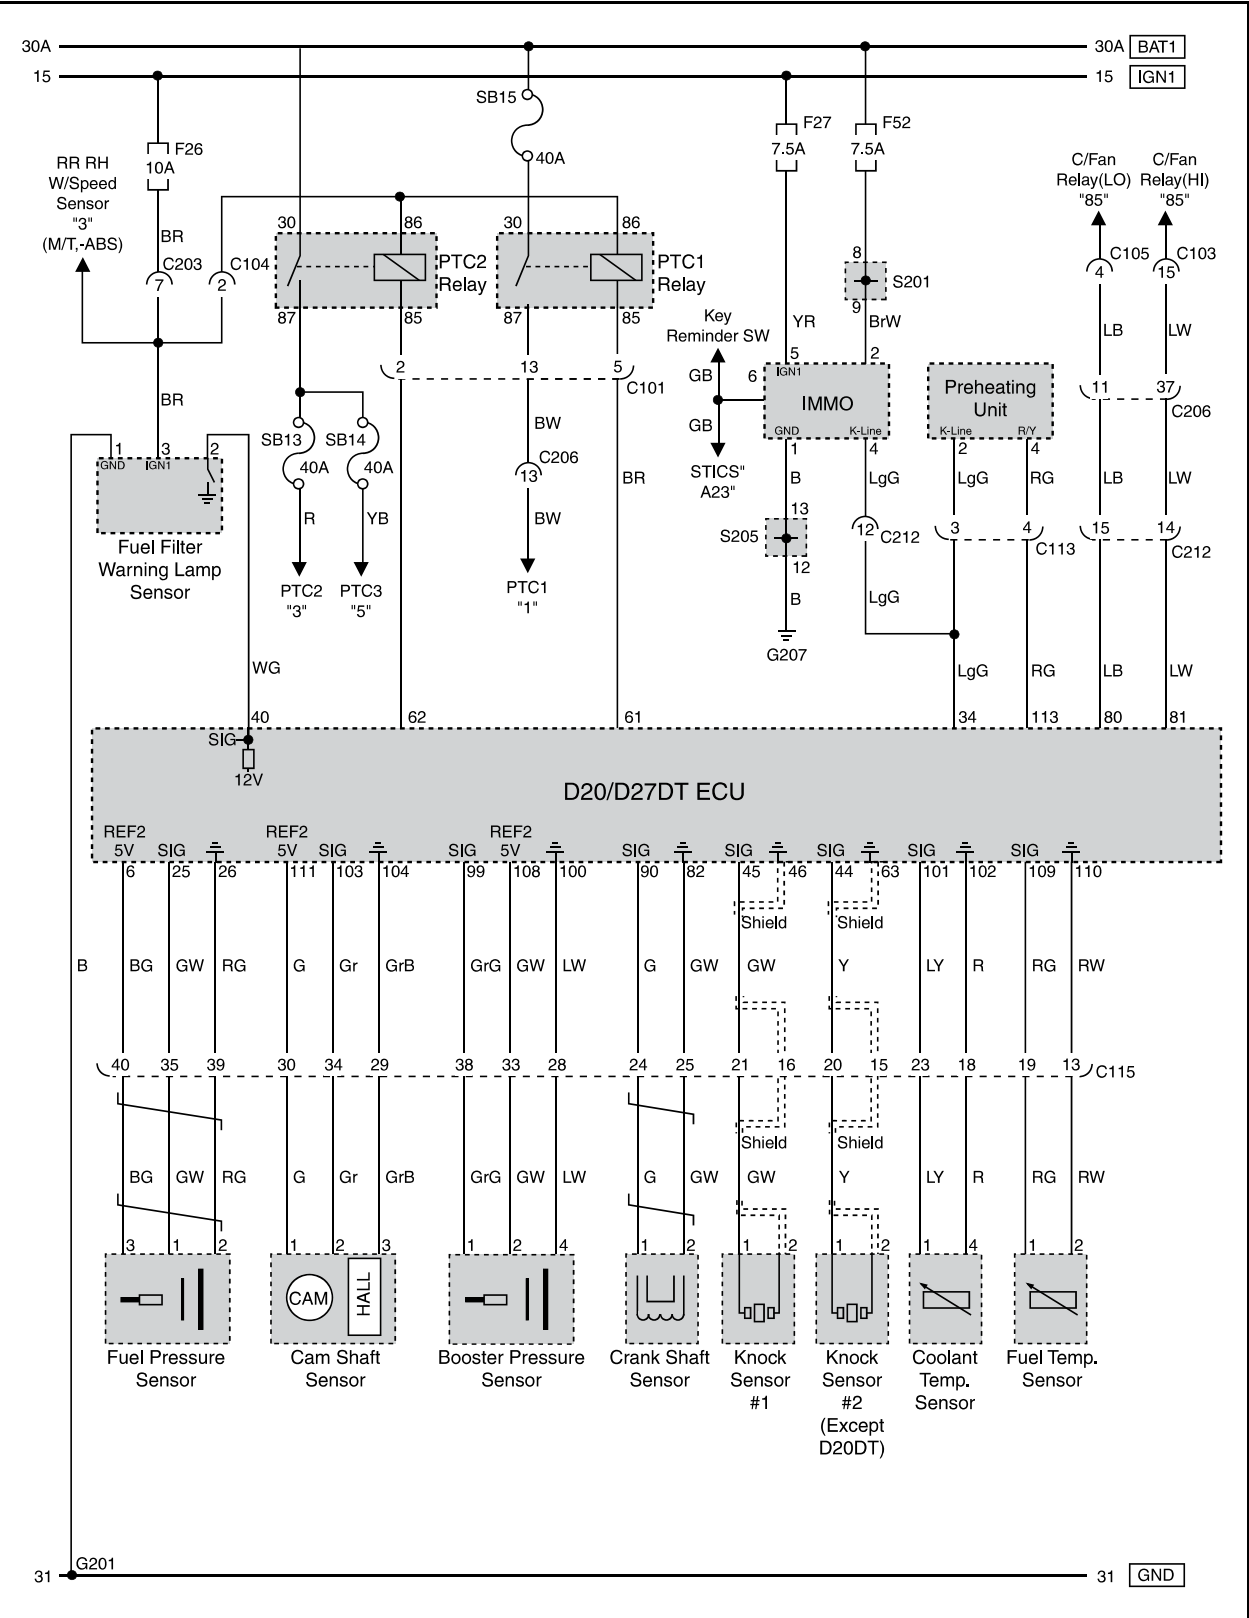

(1) CONNECTOR INFORMATION


Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C104 (14Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (18Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C113 (16Pin, Black)	W/H Eng - W/H Floor	Inside RH Fender PNL	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G103	W/H Eng Room	LH FRT END PNL (LH Head Lamp Side)	GSL 2.3, DSL M/T
G201	W/H Floor	Under the Driver Cowl Side PNL	Under C/Holder
G207	W/H Main	Inner the Passenger Cowl Side PNL	
S201 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	
S205 (14Pin, Black)	W/H Main	Upper the PTC Protector	GND

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

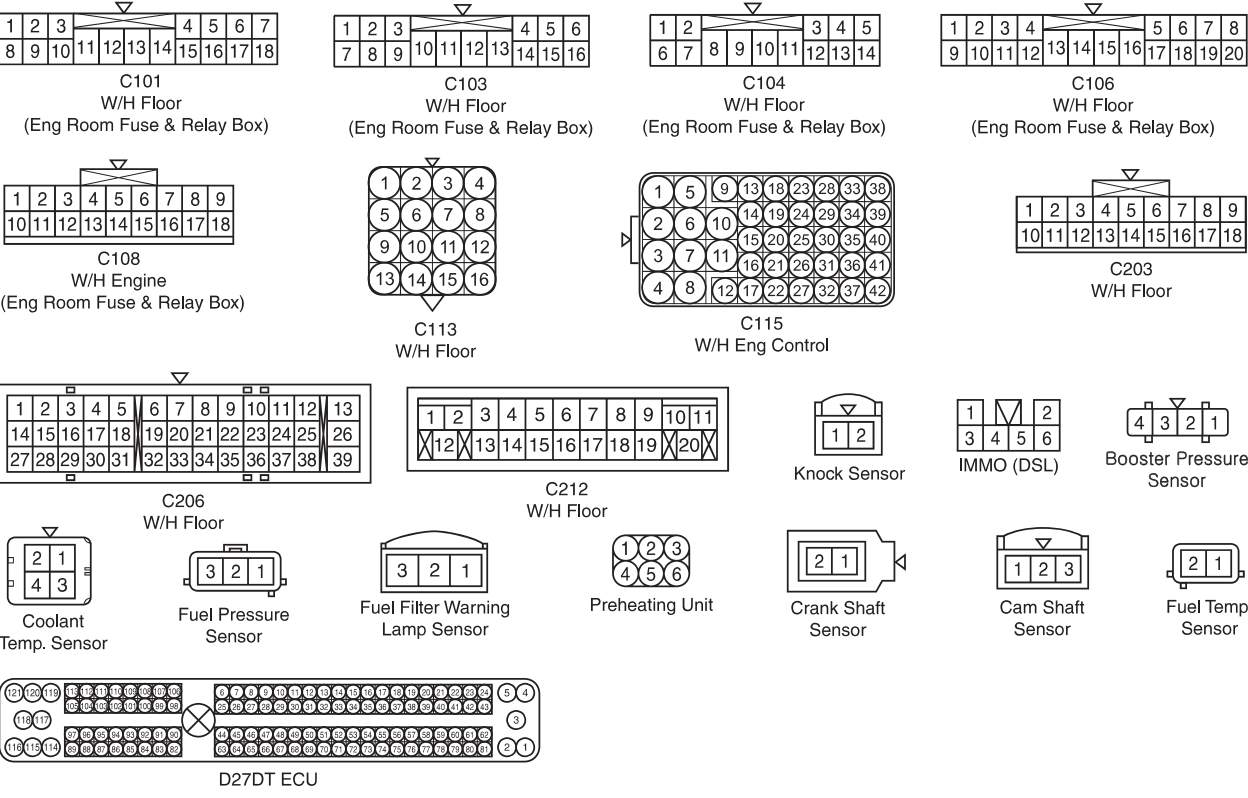

Modification basis	
Application basis	
Affected VIN	


3) INJECTOR, CAN LINE

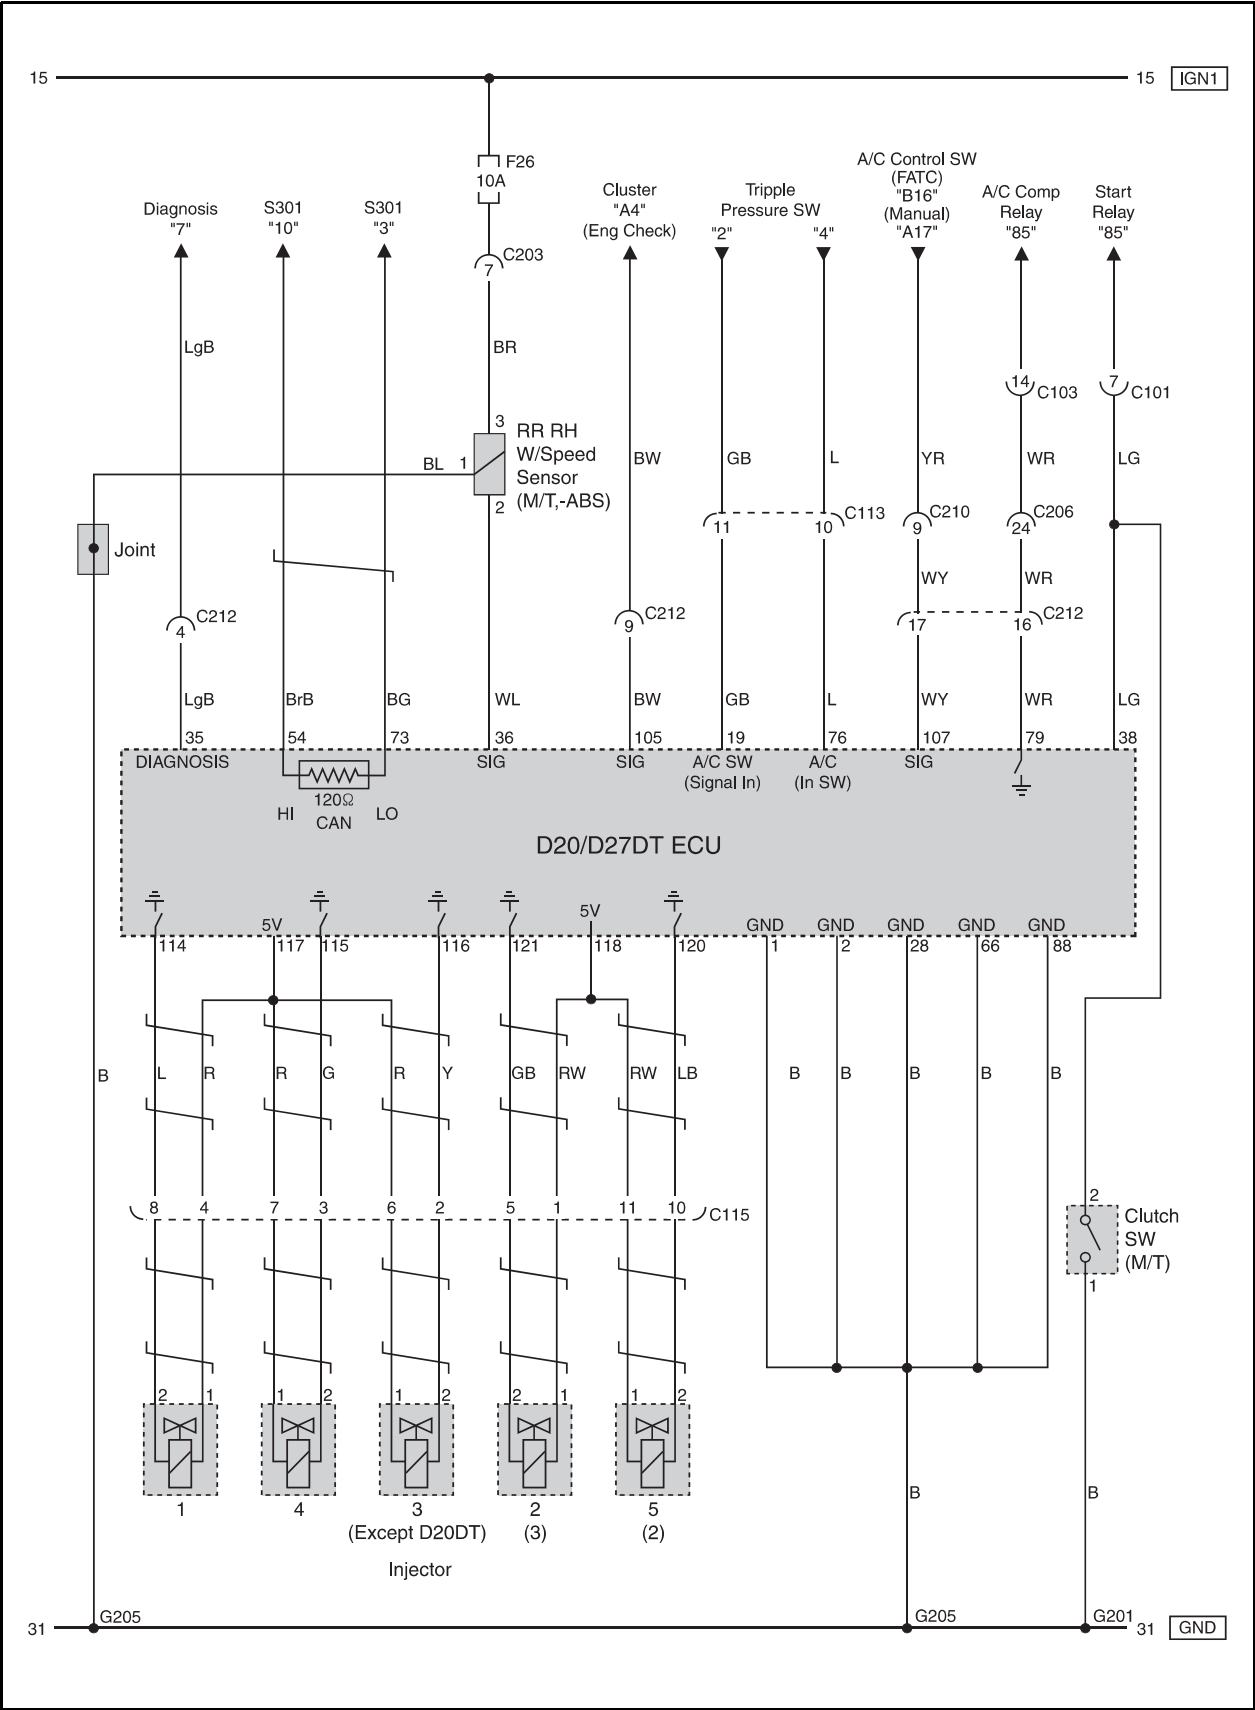

(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C105 (10Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C113 (16Pin, Black)	W/H Eng - W/H Floor	Inside RH Fender PNL	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C210 (16Pin, White)	W/H Main - W/H A/Con	Inside the Middle I/P (Right PTC)	
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G201	W/H Floor	Under the Driver Cowl Side PNL	Under C/Holder
G205	W/H Main	RH Eng ECU	ECU
S301 (14Pin, Black)	W/H Main	Beside Driver Seat W/H Protector	CAN

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

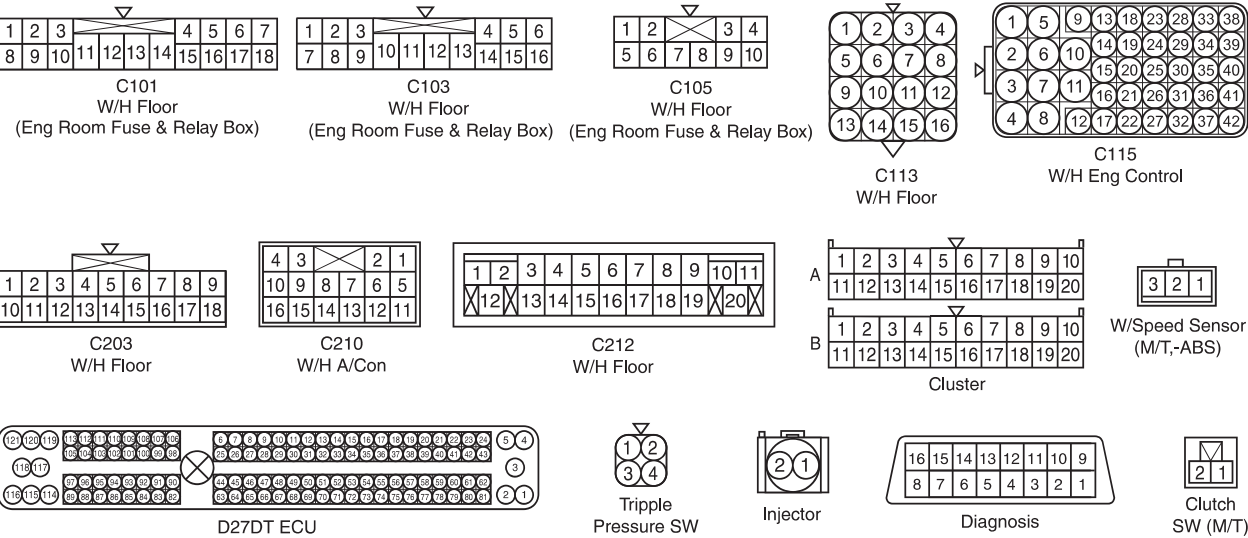

Modification basis	
Application basis	
Affected VIN	

Wiring Diagram for 2007 Honda CBR600F4i

Legend:

- 30: Battery Positive (BAT+)
- 15: Ignition 1 (IGN1)
- 50: Starter (ST)
- 31: Ground (GND)

Key Components and Connections:


- ECU (G32D):** Central control unit with multiple pins for various sensors and actuators.
- Injectors:** Six injectors (1-6) connected to the ECU via various wires (Br, RW, BG, G, WL, RY, YW).
- Pedal Module:** Contains ACC1 and ACC2 relays, connected to the ECU.
- Ignition System:** Includes three ignition coils (IGN 1, 2, 3) and six spark plugs, connected to the ECU.
- Throttle Body Actuator:** Motor and sensor connected to the ECU.
- Sensors:** Crankshaft Position Sensor, NTC Sensor (ENG Temp), Oil Level SW, and Cluster "B13" (Oil Level Warning Lamp).
- Wiring Details:** Wire colors (e.g., RW, BW, B, BY, Gr, BrR, YG, BR, WG, LY, Shield, GW, GB, RG) and connector types (e.g., C102, C202, C115, C212, C213) are specified throughout the diagram.

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G205	W/H Main	RH Eng ECU	ECU
G207	W/H Main	Inner the Passengaar Cowl Side PNL	

The diagram illustrates the wiring harness for the 2000-2001 Honda Civic EX. It includes the following components and their pin configurations:

- C102 W/H Floor (Eng Room Fuse & Relay Box):** A 4-pin fuse box with pins 1, 2, 3, and 4.
- C115 W/H Eng Control:** A 42-pin engine control unit with pins 1 through 42.
- C202 W/H Floor:** A 39-pin fuse block with pins 1 through 39.
- C206 W/H Floor:** A 39-pin fuse block with pins 1 through 39.
- C212 W/H Floor:** An 11-pin fuse block with pins 1 through 11.
- C213 W/H Floor:** An 11-pin fuse block with pins 1 through 11.
- ECU (GSL):** A 72-pin engine control unit with pins 1 through 72.
- Crank Shaft Position Sensor:** A 2-pin sensor with pins 1 and 2.
- Pedal Module:** A 6-pin module with pins 1 through 6.


2) O2 SENSOR, CPS, KNOCK SENSOR, HFM SENSOR, CANISTER PURGE VALVE

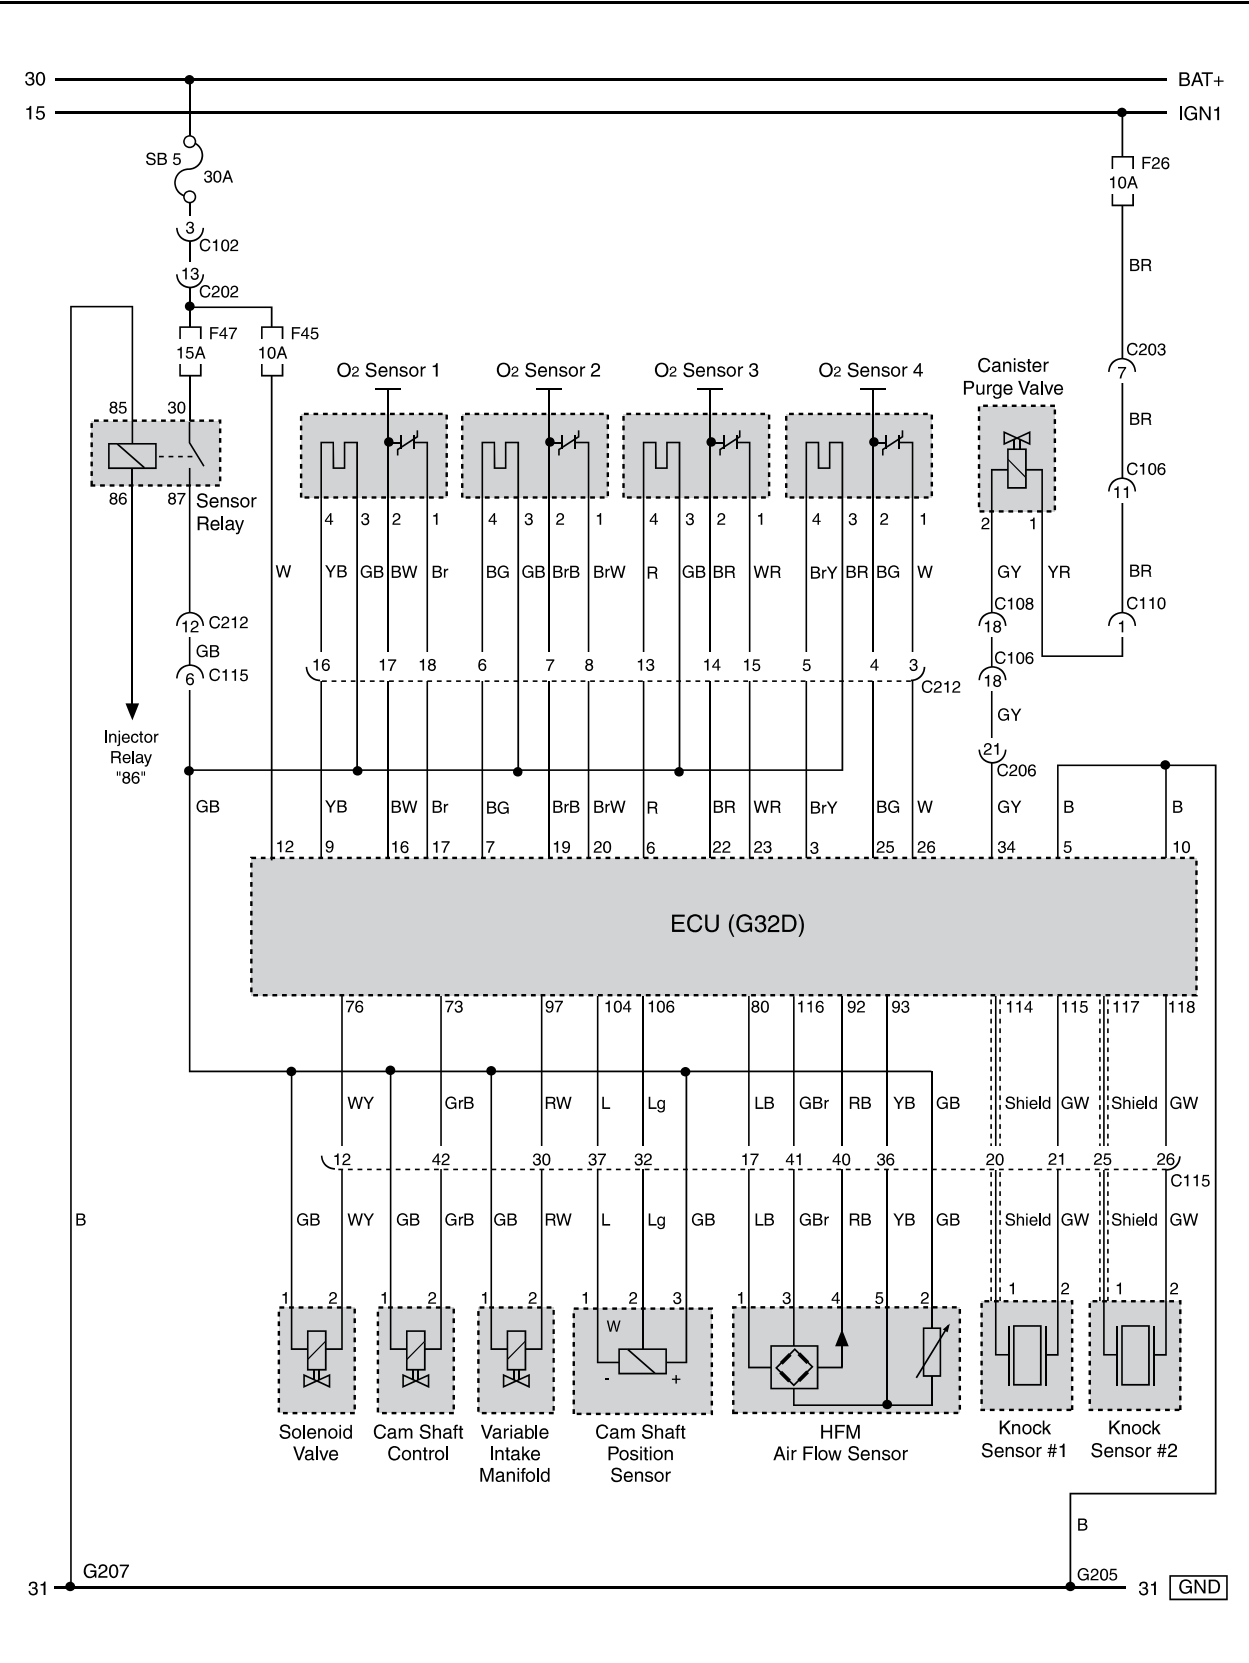

(1) CONNECTOR INFORMATION


Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (18Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C110 (18Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G205	W/H Main	RH Eng ECU	ECU
G207	W/H Main	Inner the Passengaar Cowl Side PNL	

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

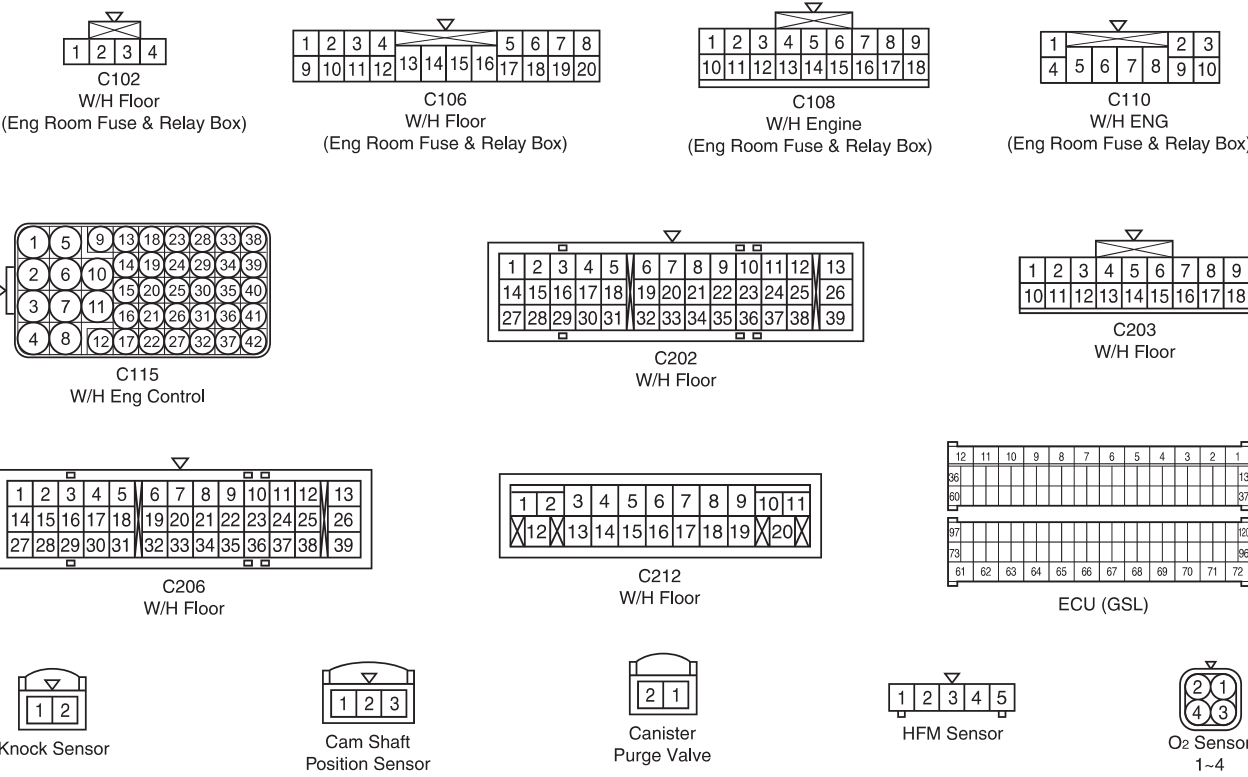

Modification basis	
Application basis	
Affected VIN	


3) S/AIR PUMP, STOP LAMP, CRUISE CONTROL SW, FUEL PUMP, IMMOBILIZER

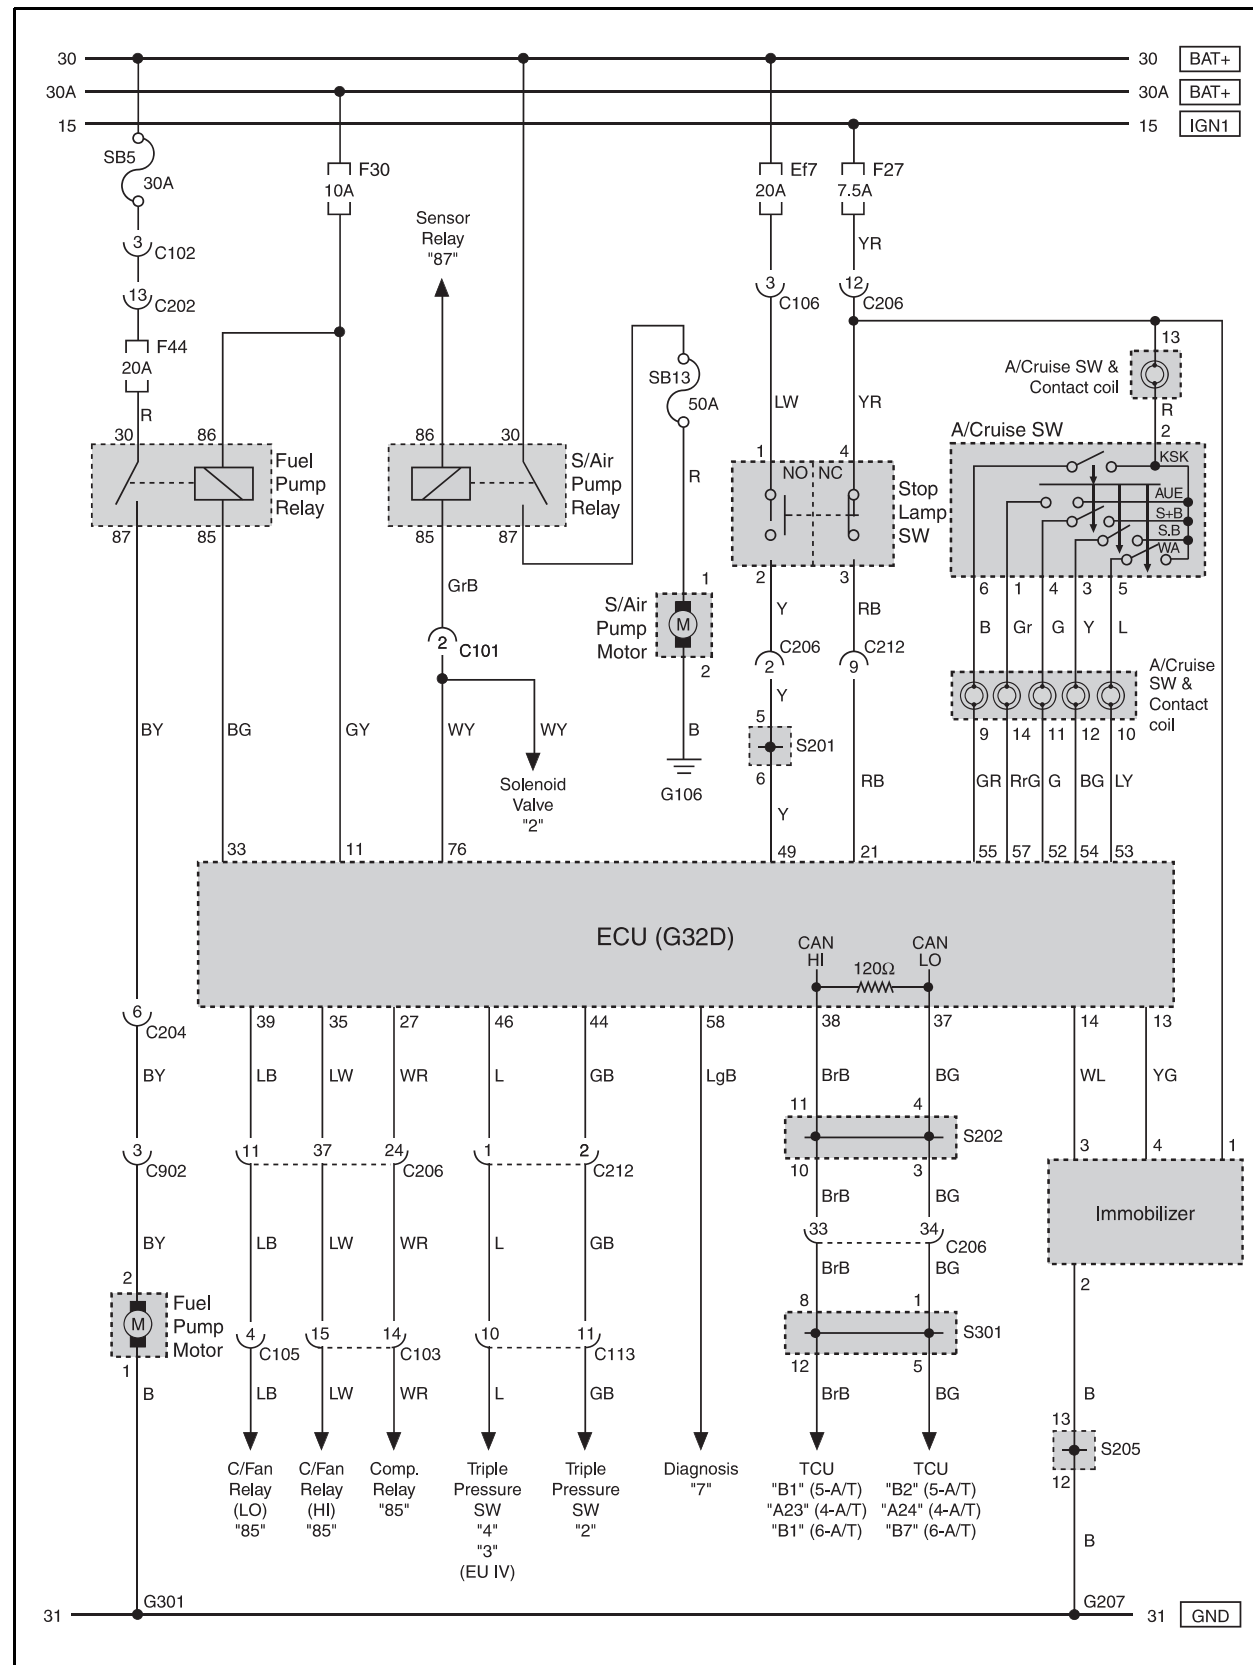

(1) CONNECTOR INFORMATION


Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C101 (18Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C105 (10Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C113 (16Pin, Black)	W/H Eng - W/H Floor	Inside RH Fender PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C204 (6Pin, Colorless)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C902 (4Pin, Black)	W/H Floor - W/H Fuel Sender	Upper the T/M	
G106	W/H Eng Room	RH Fender PNL (Beside C113)	GSL
G207	W/H Main	Inner the Passengaar Cowl Side PNL	
G301	W/H Floor	Under the Driver Seat	
S201 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	
S202 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	CAN
S205 (14Pin, Black)	W/H Main	Upper the PTC Protector	GND
S301 (14Pin, Black)	W/H Main	Beside Driver Seat W/H Protector	CAN

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

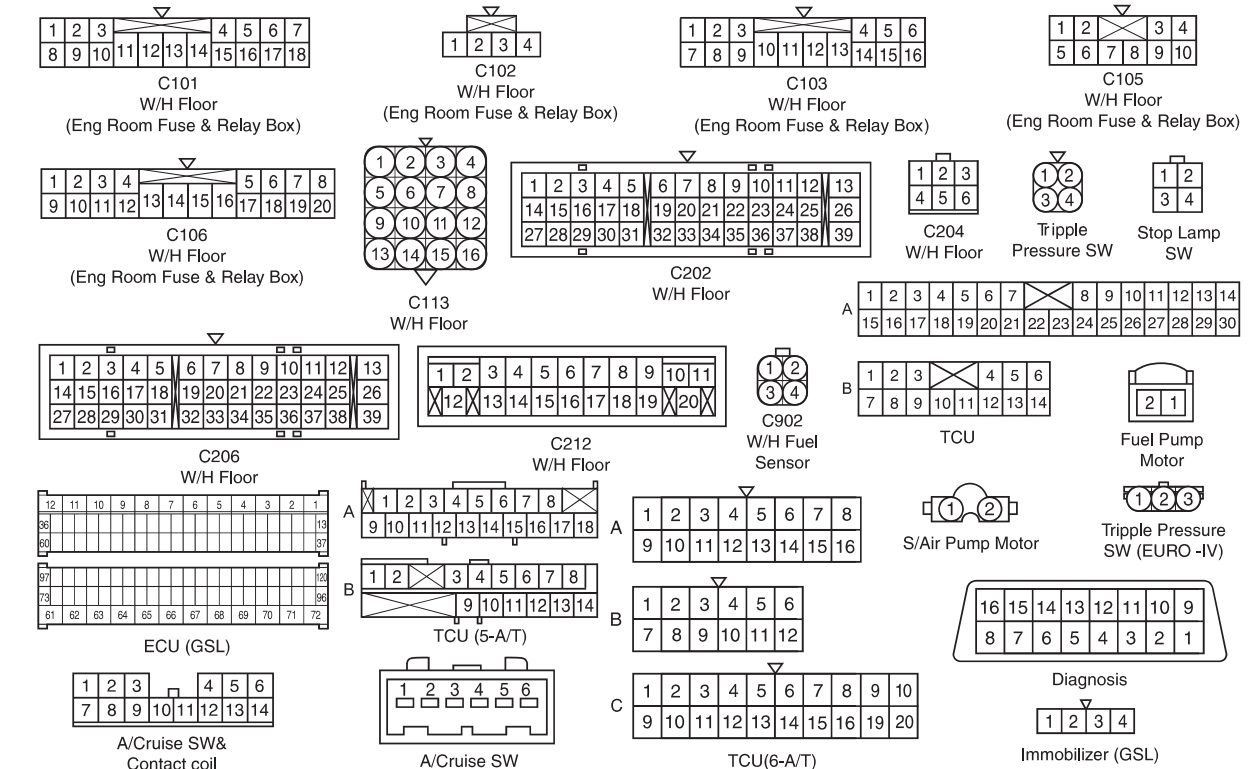

1490-00 ECU (ENGINE CONTROL UNIT - GSL G23)


1) IGN COIL, INJECTOR, PEDAL MODULE, THROTTLE SENSOR

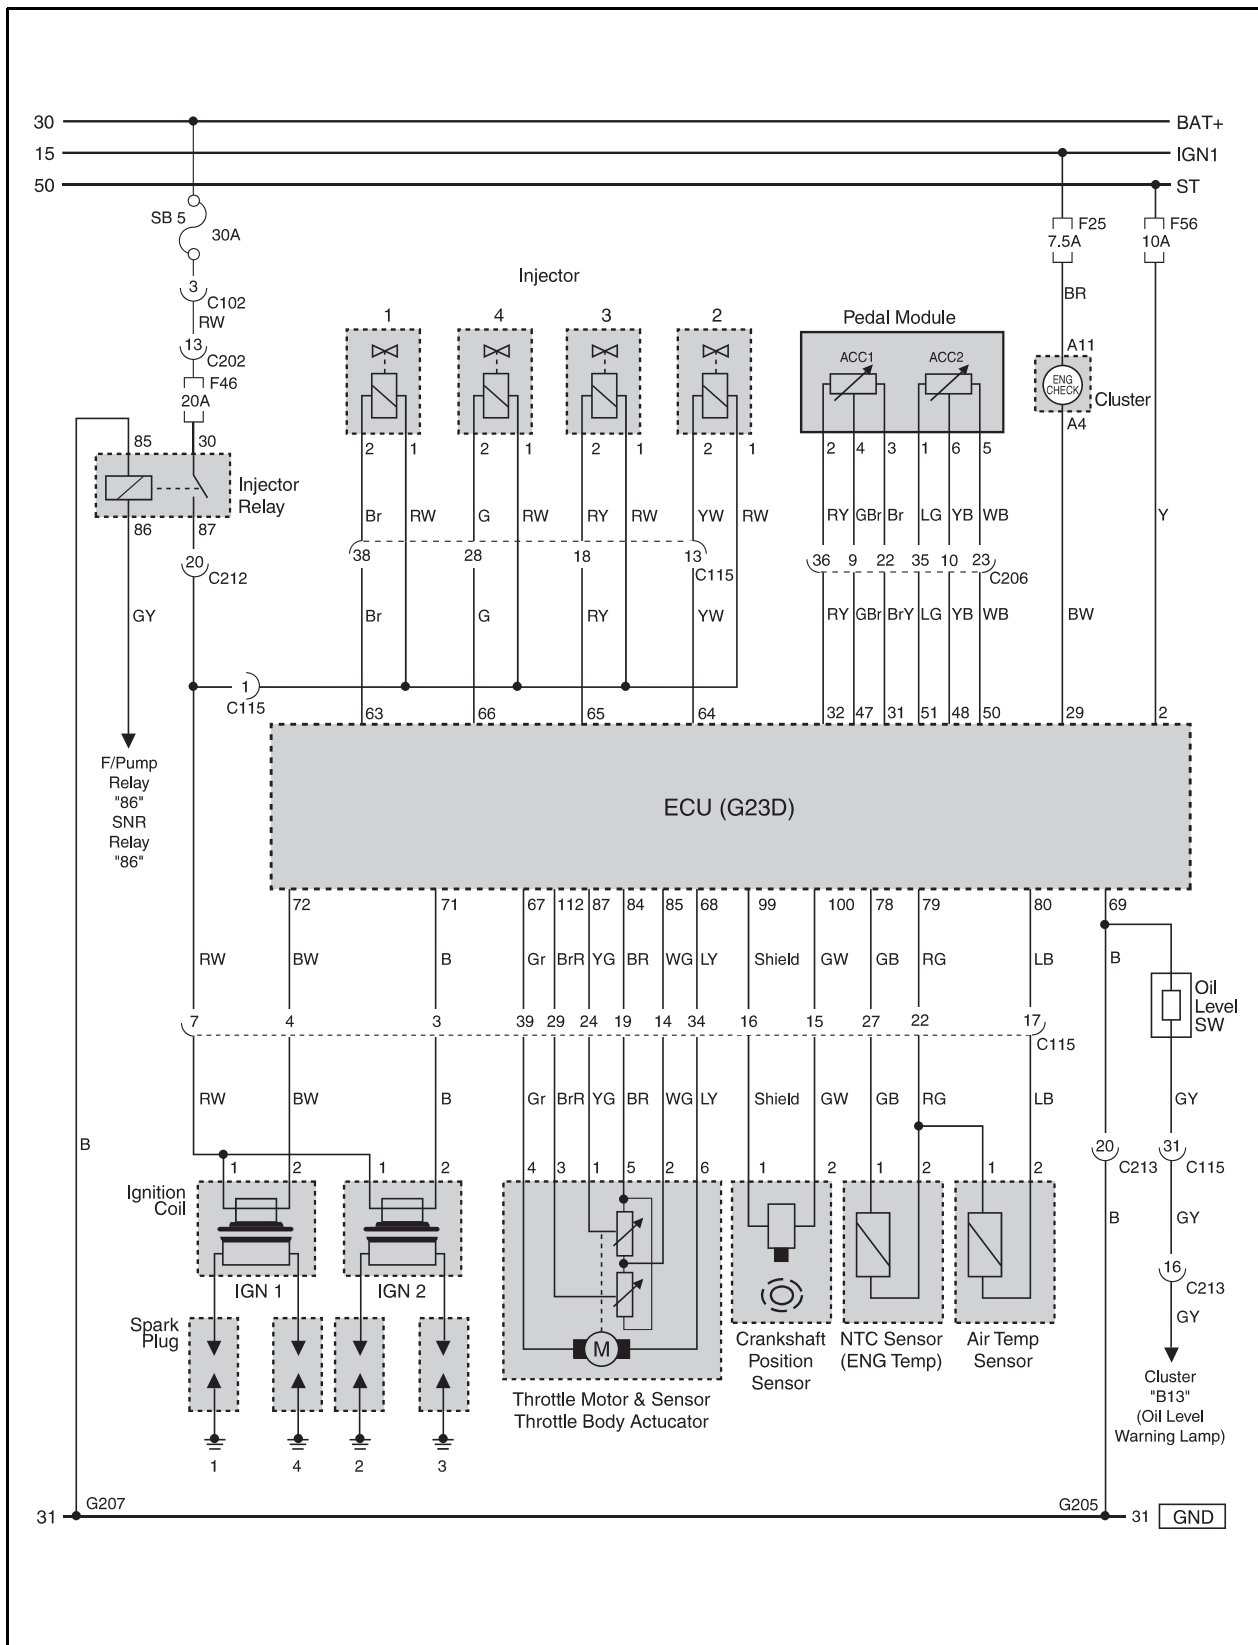

(1) CONNECTOR INFORMATION


Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
C213 (20Pin, Red)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G205	W/H Main	RH Eng ECU	ECU
G207	W/H Main	Inner the Passenger Cowl Side PNL	

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

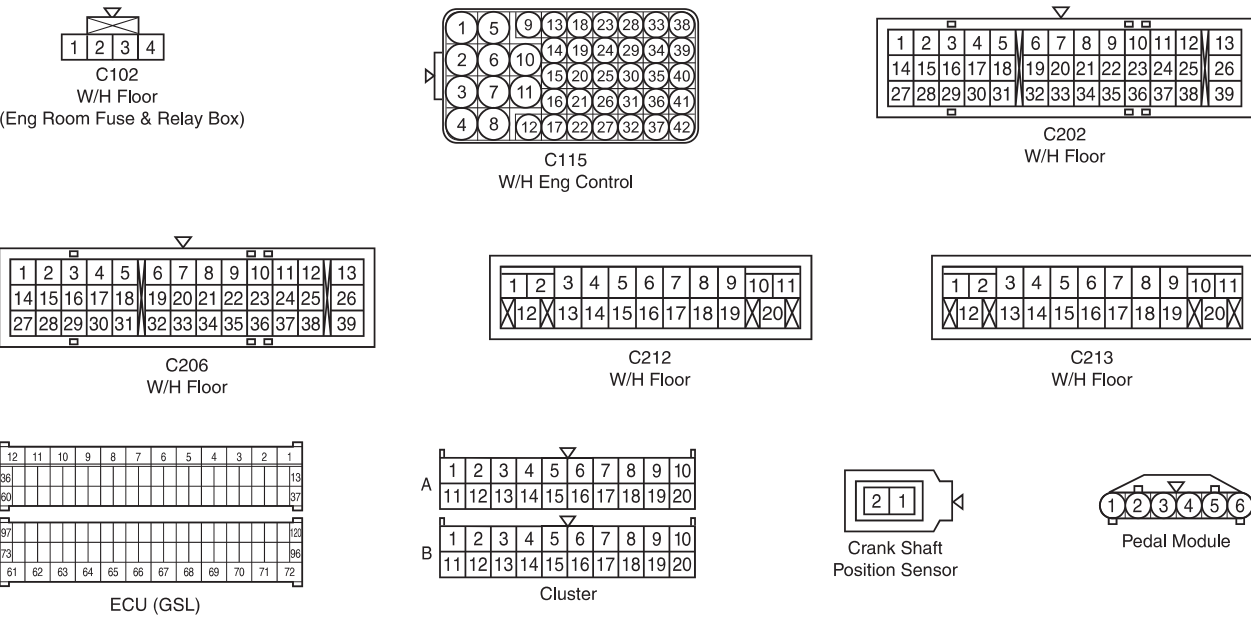

Modification basis	
Application basis	
Affected VIN	


2) O₂ SENSOR, CPS, KNOCK SENSOR, MAP SENSOR, CANISTER PURGE VALVE

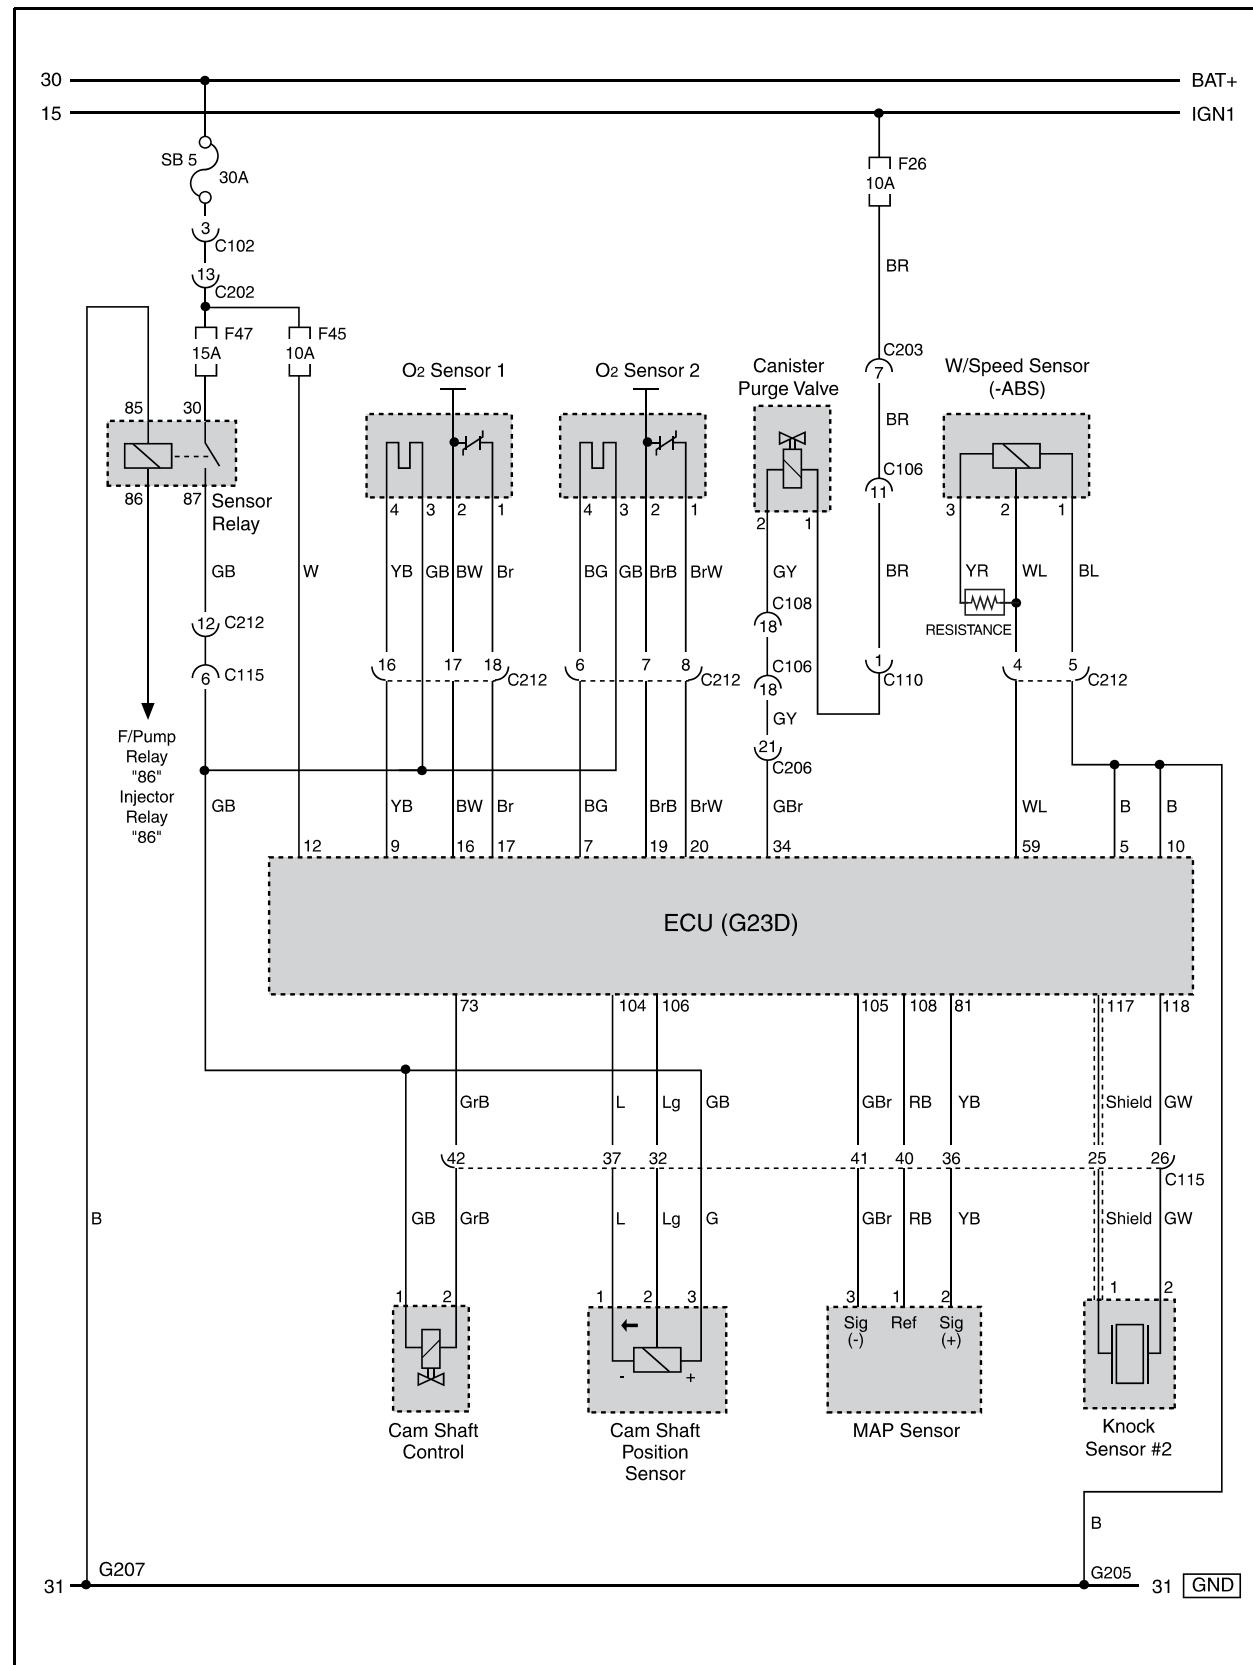


(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C102 (4Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C106 (20Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C108 (18Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C110 (10Pin, White)	W/H Eng - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C115 (42Pin, Black)	W/H Floor - W/H Eng Control	Right Eng Room Dash PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C203 (18Pin, White)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C206 (39Pin, Black)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G205	W/H Main	RH Eng ECU	ECU
G207	W/H Main	Inner the Passenger Cowl Side PNL	

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

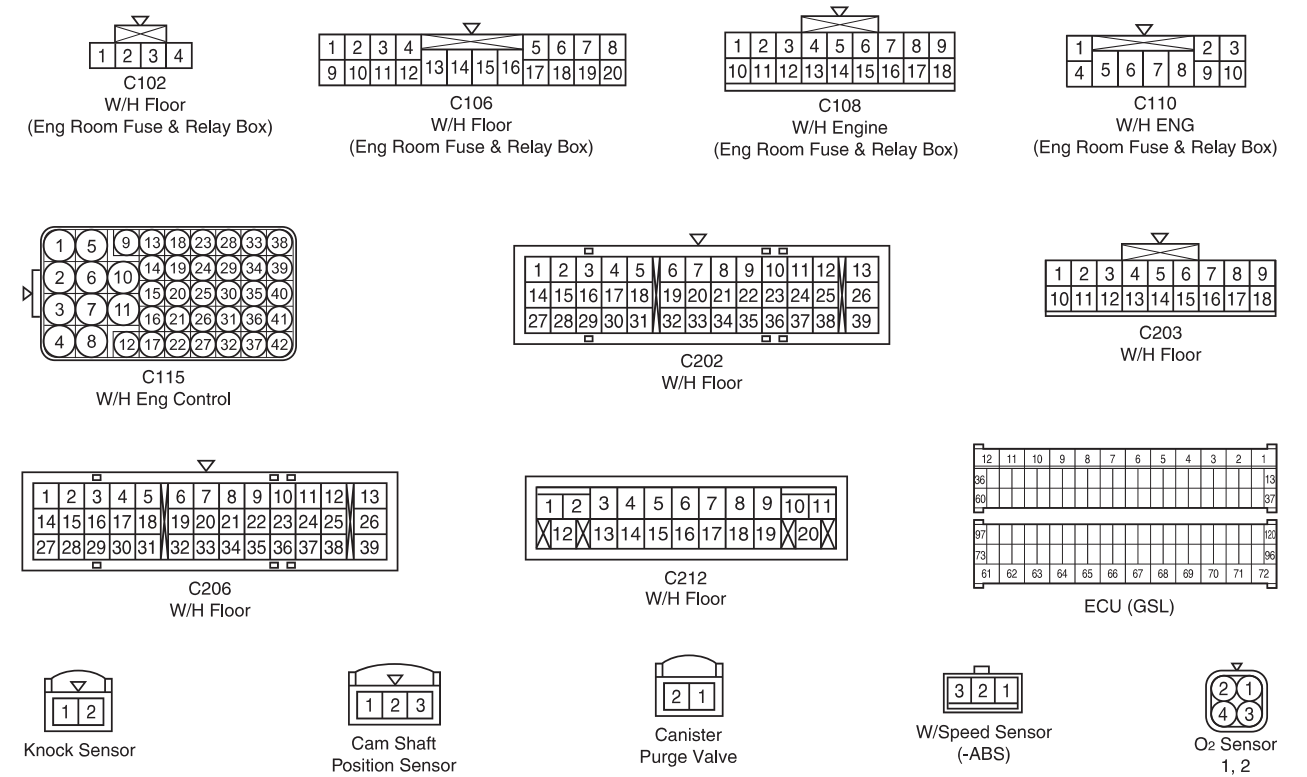


SGN
8210-00 DIAGNOSIS CIRCUIT

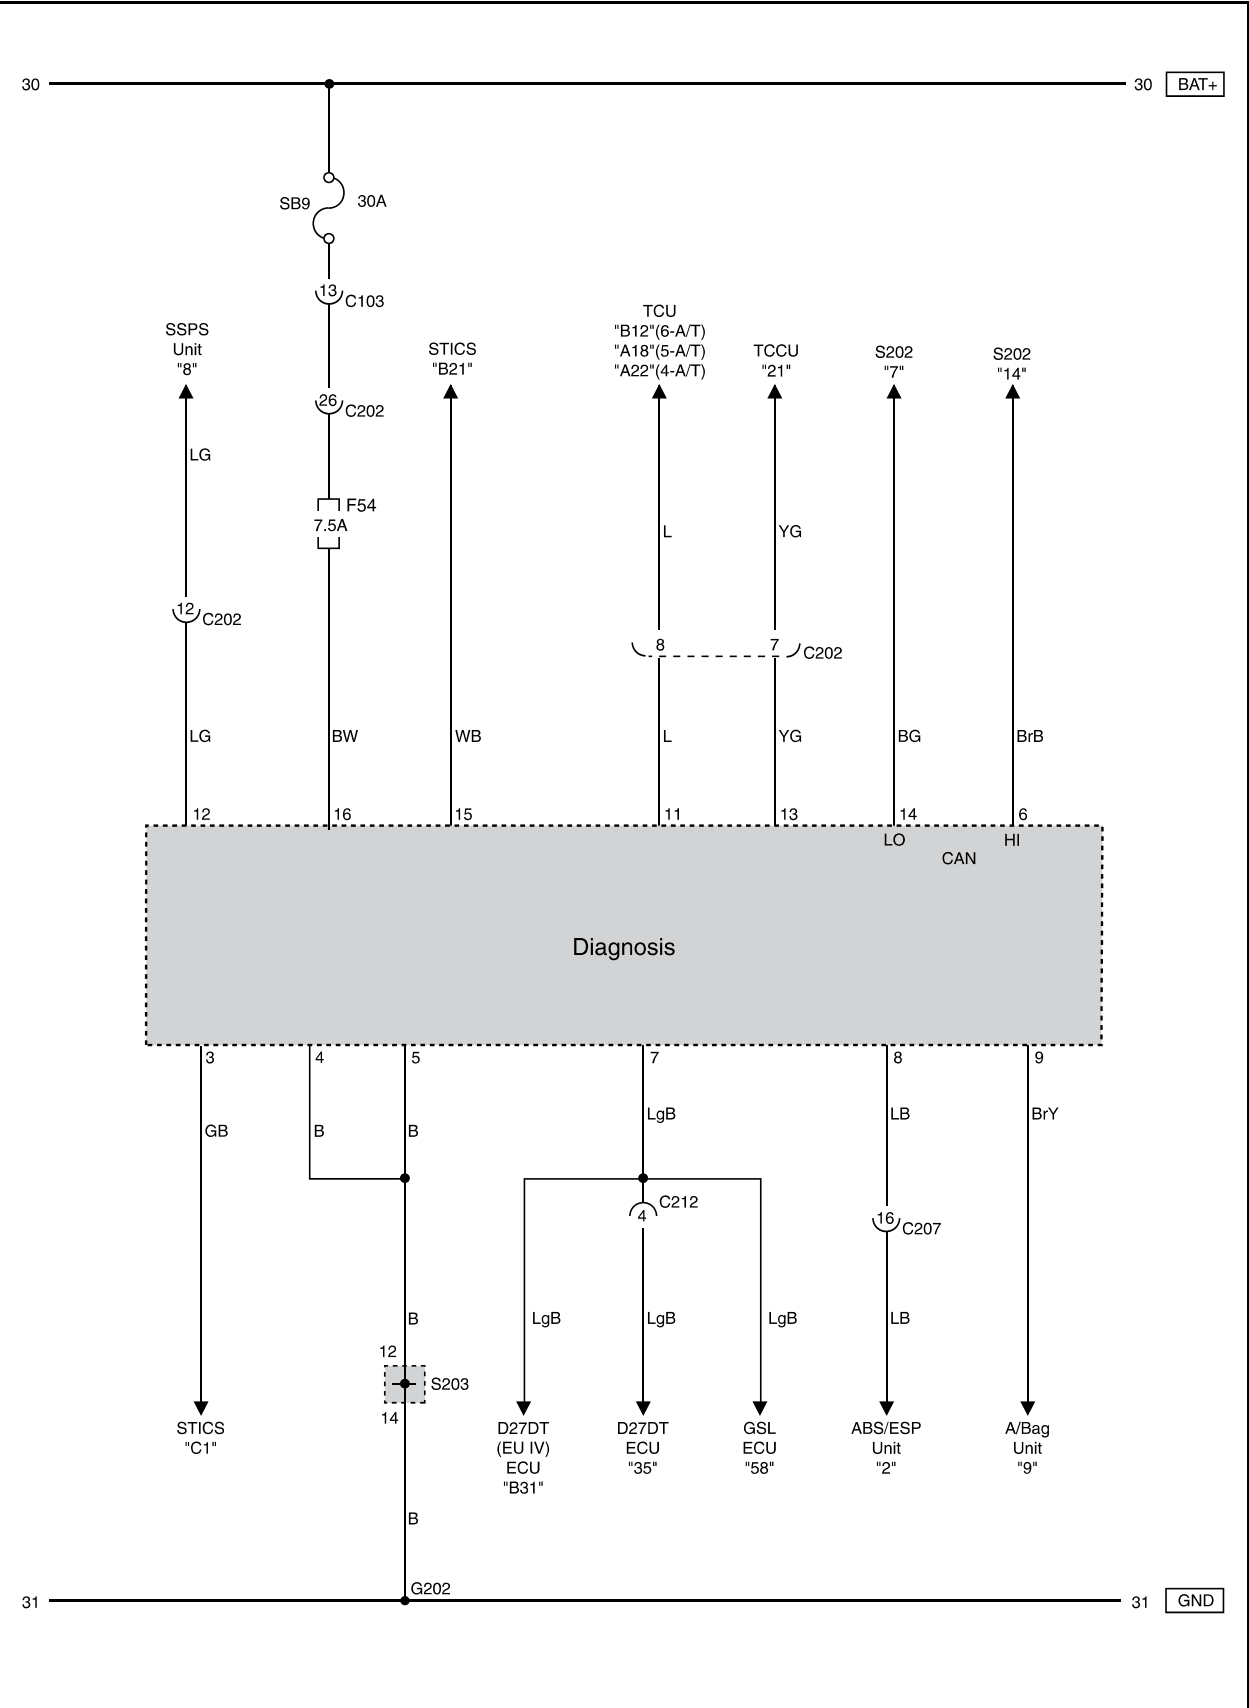

(1) CONNECTOR INFORMATION

Connector Number (Pin Number, Color)	Connecting Wiring Harness	Connector Position	Remark
C103 (16Pin, White)	W/H Floor - Eng Room Fuse & Relay Box	Eng Room Fuse & Relay Box	
C113 (16Pin, Black)	W/H Eng - W/H Floor	Inside RH Fender PNL	
C202 (39Pin, Black)	W/H Main - W/H Floor	Driver Cowl Side C/Holder	
C207 (26Pin, White)	W/H Main - W/H Floor	Upper the Driver Legroom	C/Holder
C212 (20Pin, L/Green)	W/H Main - W/H Floor	Passenger Cowl Side C/Holder	
G202	W/H Main	Under the Driver "A" Pillar	
S202 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	CAN
S203 (14Pin, Black)	W/H Main	RH Protector of the Driver Legroom	GND

(2) CONNECTOR IDENTIFICATION SYMBOL & PIN NUMBER POSITION

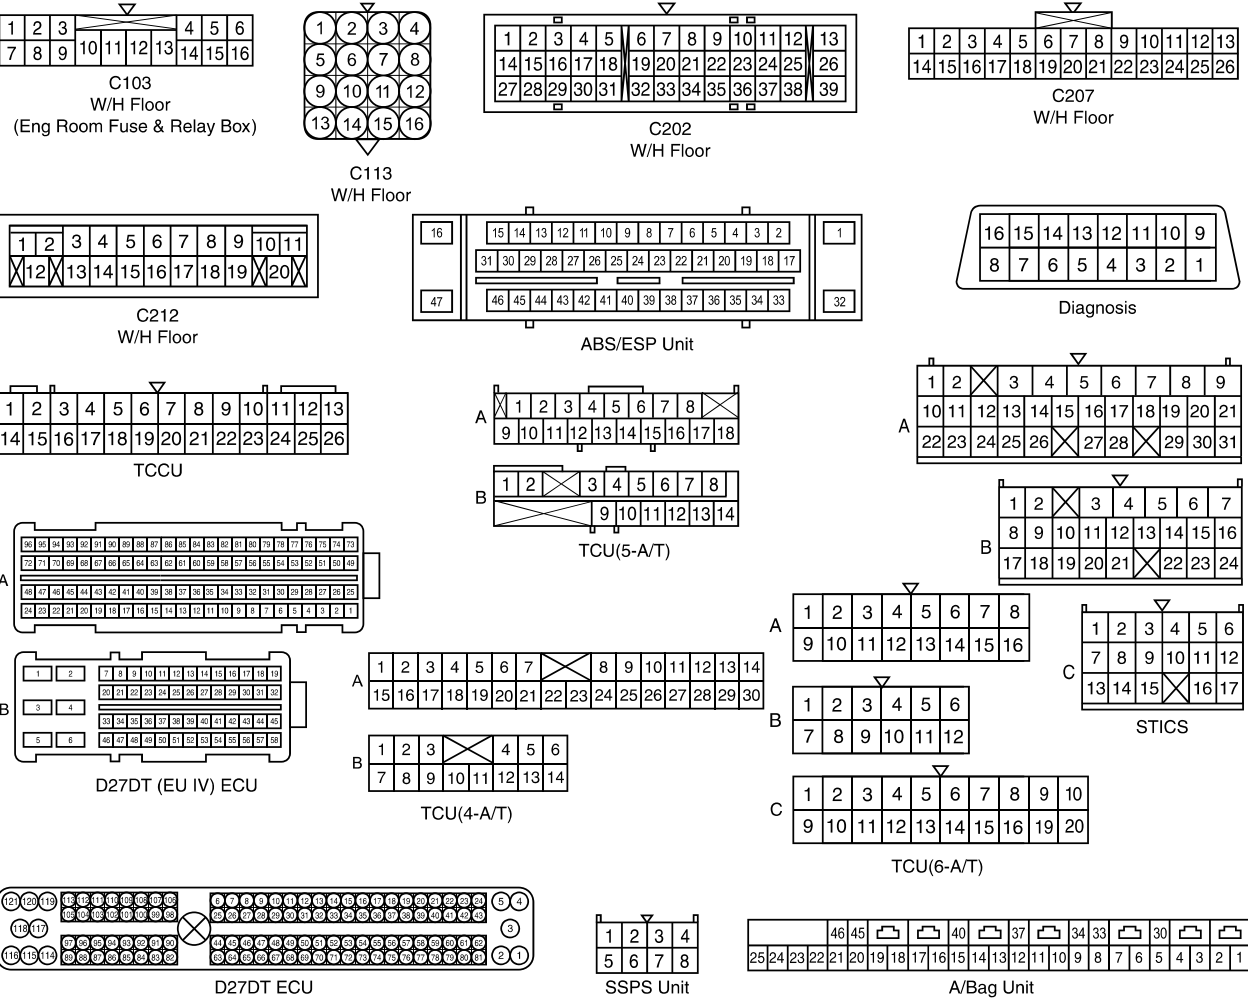

Modification basis	
Application basis	
Affected VIN	